



HP FORTRAN reference manual

HP 2000 COMPUTER SYSTEMS

HP FORTRAN

reference manual



HEWLETT-PACKARD COMPANY
11000 WOLFE ROAD, CUPERTINO, CALIFORNIA, 95014

Printed: MAR 1974 Printed in U.S.A.

First Edition, Feb. 1968 Revised, April 1970 Revised, June 1971 Revised, March 1974

© Copyright, 1974, by
HEWLETT-PACKARD COMPANY
Cupertino, California
Printed in the U.S.A.

Fourth Edition

PREFACE

This publication is the reference manual for the HP FORTRAN programming language for the 2100 family of computers. Since Hewlett-Packard provides FORTRAN Compilers for all of its operating systems, this manual covers only the features of language, not operating procedures for the compiler. The user should refer to the appropriate system manual or operator's guide listed below:

SOFTWARE OPERATING PROCEDURES SIO SUBSYSTEMS Module (5951-1390)

DISC OPERATING SYSTEM (02116-91748)

BASIC CONTROL SYSTEM (02116-9017)

MOVING-HEAD DISC OPERATING SYSTEM (02116-91779)

MAGNETIC TAPE SYSTEM (02116-91752)

In addition, the Formatter and other relocatable subroutines used by FORTRAN programs are described in full in the *RELOCATABLE SUBROUTINES* manual (02116-91780).

NEW AND CHANGED INFORMATION

For this edition, all known errors in the HP FORTRAN manual have been corrected and some information has been eliminated to avoid repetition in several manuals. The operating procedures (previously found in Section IX) have been deleted and are now described in the SOFTWARE OPERATING PROCEDURES SIO SUBSYSTEMS Module (5951-1390). The Basic Control System Relocating Loader listings have been deleted from Appendix D.

iii	PREFACE
iv	NEW AND CHANGED INFORMATION
ix	INTRODUCTION
1-1	SECTION I PROGRAM FORM
1-1	CHARACTER SET
1-2	LINES
1-2	STATEMENTS
1-2	STATEMENT LABELS
1-3	COMMENTS
1-3	CONTROL STATEMENT
1-3	END LINE
1-3	CODING FORM
2-1	SECTION II ELEMENTS OF HP FORTRAN
2-1	DATA TYPE PROPERTIES
2-2	CONSTANTS
2-2	Integer
2-2	Octal
2-3	Real
2-4	VARIABLES
2-4	Simple Variable
2-4	Subscripted Variable
2 - 5	ARRAYS
2-6	Array Structure
2-7	Array Notation
2-7	EXPRESSIONS
2-8	STATEMENTS

3-1	SECTION III
	ARITHMETIC EXPRESSIONS AND ASSIGNMENT STATEMENTS
3-1	ARITHMETIC EXPRESSIONS
3-2	Order of Evaluation
3-4	Type of Expression
3-5	ASSIGNMENT STATEMENTS
3 - 5	Type of Statement
3-6	MASKING OPERATIONS
4-1	SECTION IV
	SPECIFICATIONS STATEMENTS
4-1	DIMENSION
4-2	COMMON
4-3	Correspondence of Common Blocks
4-6	EQUIVALENCE
5-1	SECTION V
	CONTROL STATEMENTS
5-1	GO TO STATEMENTS
5-2	IF STATEMENTS
5-3	DO STATEMENTS
5-6	Do Nests
5-9	CONTINUE
5-9	PAUSE
5-10	STOP
5-10	END
5-10	END\$
6-1	SECTION VI
	MAIN PROGRAM, FUNCTIONS, AND SUBROUTINES
6-2	ARGUMENT CHARACTERISTICS
6-2	MAIN PROGRAM
6-3	SUBROUTINE SUBPROGRAM

SECTION VI

9-2 LIST OUTPUT

MAIN PROGRAM, FUNCTIONS, AND SUBROUTINES (cont) 6-4 SUBROUTINE CALL 6-5 FUNCTION SUBPROGRAM 6-7 FUNCTION REFERENCE 6-9 STATEMENT FUNCTION 6-11 BASIC EXTERNAL FUNCTIONS 6-13 RETURN AND END STATEMENTS 7-1 SECTION VII INPUT/OUTPUT LISTS AND FORMAT CONTROL 7-1 INPUT/OUTPUT LISTS 7-2 DO-IMPLIED LISTS 7-4 FORMAT STATEMENT 7-4 FORMAT Statement Conversion Specifications 7-19 FREE FIELD INPUT SECTION VIII 8-1 INPUT/OUTPUT STATEMENTS 8-1 UNIT-REFERENCE 8-2 FORMATTED READ, WRITE 8-2 UNFORMATTED READ, WRITE AUXILIARY INPUT/OUTPUT STATEMENTS 8-3 9-1 SECTION IX COMPILER INPUT AND OUTPUT 9-1 CONTROL STATEMENT 9-2 SOURCE PROGRAM 9-2 BINARY OUTPUT

- A-1 APPENDIX A

 HP CHARACTER SET
- B-1 APPENDIX B
 ASSEMBLY LANGUAGE SUBPROGRAMS
- C-1 APPENDIX C SAMPLE PROGRAM
- D-1 APPENDIX D
 FORTRAN ERROR MESSAGES
- I-1 INDEX
 TABLES
- 6-12 Table 6-1. FORTRAN Functions and Arguments ILLUSTRATIONS
- 1-4 Figure 1-1. Sample Coding Form
- 5-5 Figure 5-1. Example of a Do Loop

INTRODUCTION

The FORTRAN compiler accepts as input, a source program written according to American Standard Basic FORTRAN specifications; it produces as output, a relocatable binary object program which can be loaded and executed under control of an HP operating system.

In addition to the ASA Basic FORTRAN language, HP FORTRAN provides a number of features which expand the flexibility of the system. Included are:

Free Field Input: Special characters included with ASCII input data direct its formatting; a FORMAT statement need not be specified in the source program.

Specification of heading and editing information in the FORMAT statement through use of the "..." notation; permits alphanumeric data to be read or written without giving the character count.

Array declaration within a COMMON statement.

Redefinition of its arguments and common areas by a function subprogram.

Interpretation of an END statement as a RETURN statement.

Basic External Functions which perform masking (Boolean) operations.

Two-branch IF statement.

Octal constants.

There are several versions of the HP FORTRAN Compiler; each is designed to run in a different operating environment: Software Input/Output System, Disc Operating System, etc. The operating system manuals contain descriptions of any features limited to special versions of the compiler.

SECTION I PROGRAM FORM

A FORTRAN program is constructed of characters grouped into lines and statements.

CHARACTER SET

The program is written using the following characters:

Alphabetic: A through Z Numeric: 0 through 9

Special:

Space

= Equals

+ Plus

- Minus

* Asterisk

/ Slash

(Left Parenthesis

) Right Parenthesis

, Comma

. Decimal Point

\$ Dollar Sign

' Quotation mark

Spaces may be used anywhere in the program to improve appearance; they are significant only within heading data of FORMAT statements and, in lieu of other information, in the first six positions of a line.

In addition to the above set which is used to construct source language statements, certain characters have special significance when appearing with ASCII input data.

They are the following:

space,	Data item delimiters		
/	Record terminator		
+ -	Sign of item		
.E+-	Floating point number		
@	Octal integer		
""	Comments		
←	Suppress CR-LF (output)		

Details on the input data character set are given in Section VII.

LINES

A line is a sequence of up to 72 characters. On paper tape, each line is terminated by a return, CR, followed by a line-feed, LF. This terminator may be in any position following the statement information or comment contained in the line. If an error is punched on a paper tape, a rubout before the return and linefeed causes the entire line containing the error to be ignored.

STATEMENTS

A statement may be written in an initial line and up to five continuation lines. The statement may occupy positions 7 through 72 of these lines. The initial line contains a zero or blank in position 6. A continuation line contains any character other than zero or space in position 6 and may not contain a C in position 1.

STATEMENT LABLES

A statement may be labeled so that it may be referred to in other statements. A label consists of one to four numeric digits placed in any of the first five positions of a line. The number is unsigned and in the range of 1 through 9999. Imbedded spaces and leading zeros are ignored. If no label is used,

the first five positions of the statement line must be blank. The statement label or blank follows the CR LF terminator of the previous line.

COMMENTS

Lines containing comments may be included with the statement lines; the comments are printed along with the source program listing. A comment line requires a C in position 1 and may occupy positions 2 through 72. If more than one line is used, each line requires a C indicator. Each comment line is terminated with a CR and LF.

CONTROL STATEMENT

The first statement of a program is the control statement; it defines the output to be produced by the FORTRAN compiler. The following options are available:

Relocatable binary -- The output can be loaded by the relocating loader and run.

Source Listing output -- A listing of the source program is produced.

Object Listing output -- A list of the object program is produced.

The control statement must be followed by the CR LF terminator.

END LINE

Each subprogram is terminated with an end line which consists of blanks in positions 1 through 6 and the letters E, N, and D located in any of the positions 7 through 72. The special end line, END\$, signifies the end of five or less programs being compiled at one time. The end line is terminated by CR LF.

CODING FORM

The FORTRAN coding form is shown in Figure 1-1. Columns 73-80 may be used to indicate a sequence number for a line; they must not be punched on paper tape. All other columns of the form conform with line positions for paper tape.

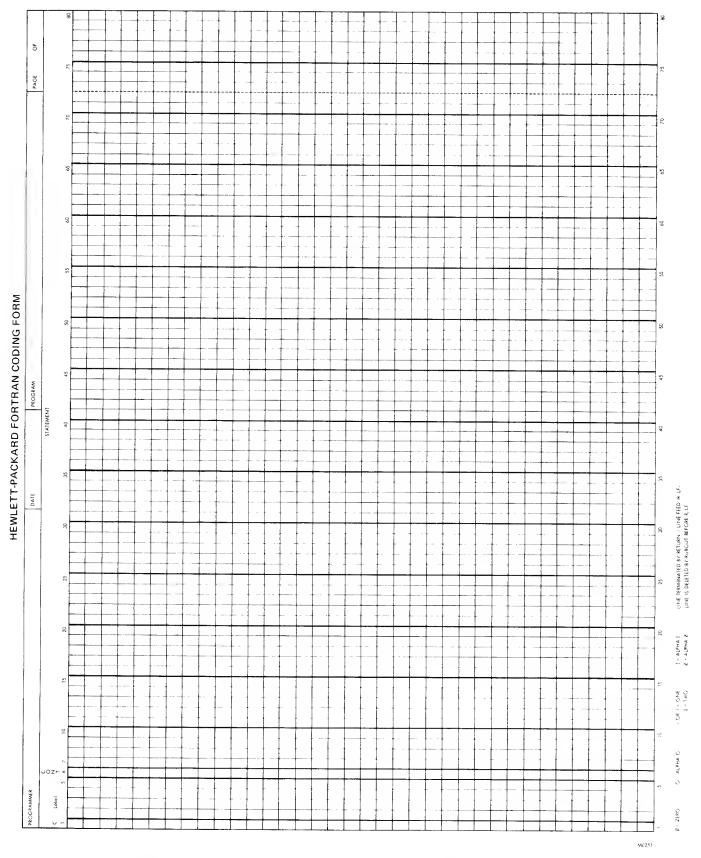


Figure 1-1. Sample Coding Form (Actual Size 11 x 13-1/2)

SECTION II FIFMENTS OF HP FORTRAN


HP FORTRAN processes two types of data -- real and integer quantities. They differ in mathematical significance, constant format, and symbolic representation.

DATA TYPE PROPERTIES


Integer and real data quantities have different ranges of values.

An integer quantity has an assumed fixed decimal point. It is represented by a 16-bit computer word with the most significant bit as the sign and the assumed decimal point on the right of the least significant bit.

An integer quantity has a range of -2^{15} to 2^{15} -1.



A real quantity has a floating decimal point; it consists of a fractional part and an exponent part. It is represented by two 16-bit computer words; the exponent and its sign are eight bits; the fraction and its sign are twenty-four bits.

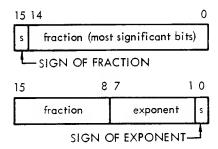

It has a range in magnitude of approximately 10^{-38} to 10^{38} and may assume positive, negative, or zero values. If the fraction is negative, the number is in two's complement form. A zero value is stored as all zero bits. Precision is approximately seven decimal digits.

CONSTANTS

A constant is a value that is always defined during execution and may not be redefined. Three types of constants are used in HP FORTRAN: integer, octal (treated as integer), and real. The type of constant is determined by its form and content.

Integer

An integer constant consists of a string of up to five decimal digits. If the range -32768 to 32767 (-2^{15} to 2^{15} -1) is exceeded, a diagnostic is provided by the compiler.

Examples:

8364	5932
1720	9
1872	31254
125	1
3653	30000

Octal

Octal constants consist of up to six octal digits followed by the letter B. The form is:

$$n_{1} n_{2} n_{3} n_{4} n_{5} n_{6} B$$
 $n_{1} is 0 or 1$
 $n_{2} - n_{6} are 0 through 7$

If the constant exceeds six digits, or if a non-octal digit appears, the constant is treated as zero and a compiler diagnostic is provided.

Examples:

7 677B	7631B
3270B	5B
3520B	75026B
175B	177776B
567B	177777B

Real

Real constants may be expressed as an integer part, a decimal point, and a decimal fraction part. The constant may include an exponent, representing a power of ten, to be applied to the preceding quantity. The forms of real constants are:

n is the number and e is the exponent to the base ten. The plus sign may be omitted for a positive exponent. The range of e is 0 through 38. When the exponent indicator E is followed by a + or - sign, then all digits between the sign and the next operator or delimiter are assumed to be part of the exponent expression, e.

If the range of the real constant is exceeded, the constant is treated as zero and a compiler diagnostic message occurs.

Examples:

4.512	4.5E2
4.	.45E+3
.512	4.5E-5
4.0	0.5
4.E-10	.5E+37
1.	10000.0

VARIABLES

A variable is a quantity that may change during execution; it is identified by a symbolic name. Simple and subscripted variables are recognized. A simple variable represents a single quantity; a subscripted variable represents a single quantity (element) within an array of quantities. Variables are identified by one to five alphanumeric characters; the first character must be alphabetic.

The type of variable is determined by the first character of the name. The letters I, J, K, L, M, and N, indicate an integer (fixed point) variable; any other non-numeric character indicates a real (floating point) variable. Spaces imbedded in variable names are ignored.

Simple Variable

A simple variable defines the location in which values can be stored. The value specified by the name is always the current value stored in that location.

Examples:

Integer	Real
I	ALPHA
JAIME	G13
К9	DOG
MIL	XP2
NIT	GAMMA

Subscripted Variable

A subscripted variable defines an element of an array; it consists of an alphanumeric identifier with one or two associated subscripts enclosed in parentheses. The identifier names the array; the subscripts point to the

particular element. If more than two subscripts appear, a compiler diagnostic message is given.

Subscripts may be integer constants, variables, or expressions; they may have the form (\exp_1, \exp_2) , where \exp_i is one of the following:

where c and k are integer constants and v is a simple integer variable.

Examples:

Integer	Real
I(J, K)	A(J)
LAD(3, 3)	BACK (M+5, 9)
MAJOR (24*K, I+5)	OPA45(4*I)
NU (K+2)	RADI (IDEG)
NEXT (N*5)	VOLTI (,J)

ARRAYS

An array is an ordered set of data of one or two dimensions; it occupies a block of successive memory locations. It is identified by a symbolic name which may be used to refer to the entire array. An array and its dimensions must be declared at the beginning of the program in a DIMENSION or COMMON statement. The type of an array is determined by the first letter of the array name. The letters I, J, K, L, M, and N, indicate an integer array; any other letter indicates a real array.

Each element of an array may be referred to by the array name and the subscript notation. Program execution errors may result if subscripts are larger than the dimensions initially declared for the array, however, no diagnostic messages are issued.

Array Structure

Elements of arrays are stored by columns in ascending order of storage locations. An array declared as SAM(3,3), would be structured as:

Columns

Rows

SAM(1,1)	SAM(1,2)	SAM(1,3)
SAM(2,1)	SAM(2,2)	SAM(2,3)
SAM(3,1)	SAM(3,2)	SAM(3,3)

and would be stored as:

m SAM(1,1)

m+1 SAM(2,1)

m+2 SAM(3,1)

m+3 SAM(1,2)

m+4 SAM (2,2)

m+5 SAM(3,2)

m+6 SAM(1,3)

m+7 SAM(2,3)

m+8 SAM(3,3)

The location of an array element with respect to the first element is a function of the subscripts, the first dimension, and the type of the array. Addresses are computed modulo 2^{15} .

Given DIMENSION A(L,M), the memory location of A(i,j) with respect to the first element, A, of the array, is given by the equation:

$$\ell = A + [i - 1 + L(j - 1)] *s$$

The quantity in brackets is the expanded subscript expression. The element size, s, is the number of storage words required for each element of the array: for integer arrays, s = 1; for real arrays, s = 2.

Array Notation

The following subscript notations are permitted for array elements:

For a two-dimensional array, $A(d_1, d_2)$:

A(I,J) implies A(I,J) A(I) implies A(I,1) A implies A(I,1)*

For a single-dimension array, A(d)

A(I) implies A(I) A implies A(1)

The elements of a single-dimension array, A(d), however, may not be referred to as A(I,J). A diagnostic message is given by the compiler if this is attempted.

EXPRESSIONS

An expression is a constant, variable, function or a combination of these separated by operators and parentheses, written to comply with the rules for constructing the particular type of instruction. An arithmetic expression has numerical value; its type is determined by the type of the operands.

Examples:

A+B-C .4+SIN(ALPHA)

X*COS(Y) A/B+C-D*F

RALPH-ALPH 4+2*IABS(LITE)

^{*}In an Input/Output list, the name of a dimensioned array implies the entire array rather than the first element.

STATEMENTS

Statements are the basic functional units of the language. Executable statements specify actions; non-executable statements describe the characteristics and arrangement of data, editing information, statement functions, and classification of program units.

A statement may be given a numeric label of up to four digits (1 to 9999); a label allows other statements to refer to a statement. Each statement label used must be unique within the program.

SECTION III ARITHMETIC EXPRESSIONS AND ASSIGNMENT STATEMENTS

ARITHMETIC EXPRESSIONS

An arithmetic expression may be a constant, simple or subscripted variable, or a function. Arithmetic expressions may be combined by arithmetic operators to form complex expressions.

Arithmetic operators are:

- + Addition
- Subtraction
- * Multiplication
- / Division
- ** Exponentiation

If α is an expression, (α) is an expression. If α and β are arithmetic expressions, then the following are expressions:

$$\alpha + \beta$$
 $\alpha - \beta$ α/β
 $\alpha * \beta$ $+ \alpha$ $- \alpha$
 $\alpha * * \beta$

An arithmetic expression may not contain adjoining arithmetic operators, α op op $\beta\text{.}$

Expressions of the form $\alpha^{**}\beta$ and $\alpha^{**}\beta$ and $\alpha^{**}(-\beta)$ are valid; $\alpha^{**}\beta^{**}\gamma$ is not valid.

Integer overflow resulting from arithmetic operations is not detected at execution time.

Examples:

PROGRAM
S*ATEMENT
35 4C 4 ^K N ^I

Order of Evaluation

In general, the hierarhy of arithmetic operation is:

**	exponentiation		class 1
/	division	}	class 2
*	multiplication	}	
-	subtraction	(class 3
+	addition	∫	

In an expression with no parentheses or within a pair of parentheses, evaluation basically proceeds from left to right, or in the above order if adjacent operators are in a different class.

When writing an integer expression it is important to remember not only the left to right scanning process, but also that dividing an integer quantity by an integer quantity yields a truncated result; thus 11/3 = 3. The expression I*J/K may yield a different result than the expression J/K*I. For example, 4*3/2 = 6; but 3/2*4 = 4.

Expressions enclosed in parentheses and function references are evaluated as they are encountered from left to right.

Examples:

In the examples below, s_1 , s_2 ,..., s_n indicate intermediate results during the evaluation of the expression; the symbol \rightarrow can be interpreted as "goes to".

a) Evaluation of class 1 precedes class 3 A+B**C-D $B**C\to s$ 1 $s_1+A\to s_2$ $s_2-D\to s_3$ s₃ is the evaluated expression

b) Evaluation of class 2 precedes class 3

A*B*C/D+E*F-G/H A*B*S1 S1*C*S2 S2/D*S3 E*F*S4 S4+S3*S5 G/H*S6 -S6*S7 S7+S5*S8 S8 is the evaluated expression

c) Evaluation of an expression including a function is performed.

A+B**C+D+COS(E)

B**C \rightarrow s
1

A+s
1 \rightarrow s
2

s
2+D \rightarrow s
3

COS(E) \rightarrow s
4

s
4+s
3 \rightarrow s
5 is the evaluated expression

d) Parentheses can control the order of evaluation

A*B/C+D $A*B\to s_1$ $s_1/C\to s_2$ $s_2+D\to s_3$ A*B/(C+D) $A*B\to s_1$ $C+D\to s_2$ $s_1/s_2\to s_3$ s_3 is the evaluated expression

e) If more than one pair of parentheses or if an exponential expression appears, evaluation is performed left to right.

```
A+B**C-(D*E+F)+(G-H*P)

B**C\rightarrowS
1
S1+A\rightarrowS
2
D*E\rightarrowS
3
S3+F\rightarrowS
4
-S4\rightarrowS
5
S5+S2\rightarrowS
6
H*P\rightarrowS
7
-S7\rightarrowS
8
S8+G\rightarrowS
9
S9+S6\rightarrowS
10
S10 is the evaluated expression
```

Type of Expression

With the exception of exponentiation and function arguments, all operands within an expression must be of the same type. An expression is either real or integer depending on the type of all of its constituent elements.

If either an integer or real operand is exponentiated by an integer operand, the resultant element is of the same type as that of the operand being exponentiated. If both operands are real, the resultant element is real.

Examples:

J**I integer
A**I real
A**B real

An integer exponentiated by a real operand is not valid.

ASSIGNMENT STATEMENTS

An arithmetic assignment statement is of the form:

v = e

The variable, v, may be simple or subscripted; e is an expression. Execution of this statement causes the evaluation of the expression, e, and the assignment of the value to the variable.

Type of Statement

The processing of the evaluated expression is performed according to the following table:

Type of v	Type of e	Assignment rule
Integer	Integer	Transmit e to v without change.
Integer	Real	Truncate and transfer as integer to v.
Real	Integer	Transform integer form of e to floating decimal and transfer to v.
Real	Real	Transmit e to v without change.

Examples:

PROGRAMMER	
	Transmit without change Transmit without change Truncate Convert to real
N=IZZY+LAKE/MOD	Transmit without change

MASKING OPERATIONS

In HP FORTRAN, masking operations may be performed using the Basic External Functions IAND, IOR, and NOT. (See Section VI.) These functions are as follows:

IAND Form the bit-by-bit logical product of two operands

IOR Form the bit-by-bit logical sum of two operands

NOT Complement the operand

The operations are described by the following table:

Value Argur	e of ments	Value of Function				
a _l	a ₂	IAND (a ₁ , a ₂)	IOR (a ₁ , a ₂)	NOT (a _l)		
1	1	1	1	0		
1	0	0	1	0		
0	1	0	1	1		
0	0	0	0	1		

Examples:

PROGRAMMER						DATE		PROGRAM	
C O C Label Y							STATEMENT		
1 5 6 7	16	15	20	25	30	35	40	45	50
AI	[=]	725Ø7B							
IB	=	7155ØB							

IAND (IA, IB) is 70500B

IOR (IA, IB) is 73557B

NOT (IA) is 105270B

SECTION IV SPECIFICATIONS STATEMENTS

The Specifications statements, which include DIMENSION, COMMON, and EQUIVA-LENCE, define characteristics and arrangement of the data to be processed. These statements are non-executable; they do not produce machine instructions in the object program. The statements must all appear before the first executable statement in the following order: DIMENSION, COMMON, and EQUIVALENCE.

DIMENSION

The DIMENSION statement reserves storage for one or more arrays.

DIMENSION
$$v_1$$
 (i₁), v_2 (i₂),..., v_n (i_n)

An array declarator, $v_j(i_j)$; defines the name of an array, v_j , and its associated dimensions, (i_j) . The declarator subscript, i, may be an integer constant or two integer constants separated by a comma. The magnitude of the values given for the subscripts indicates the maximum value that the subscript may attain in any reference to the array.

The number of computer words reserved for a given array is determined by the product of the subscripts and the type of the array name. For integer arrays, the number of words equals the number of elements in the array. For real arrays, two words are used for each element; the storage area is twice the product of the subscripts.

A diagnostic message is printed if an array size exceeds 2 15 -1 locations.

Examples:

DIMENSION SAM (5, 10), ROGER (10, 10), NILE (5, 20)

Area reserved for SAM 5*10*2 = 100 words Area reserved for ROGER 10*10*2 = 200 words Area reserved for NILE 5*20*1 = 100 words

COMMON

The COMMON statement reserves a block of storage that can be referenced by the main program and one or more subprograms. The areas of common information are specified by the statement form:

COMMON
$$a_1, a_2, \ldots, a_n$$

Each area element, $a_{\underline{i}}$, identifies a segment of the block for the subprogram in which the COMMON statement appears. The area elements may be simple variable identifiers, array names, or array declarators (dimensioned array names).

If dimensions for an array appear both in a COMMON statement and a DIMENSION statement, those in the DIMENSION statement will be used.

Any number of COMMON statements may appear in a subprogram section (preceding the first executable statement). The order of the arrays in common storage is determined by the order of the COMMON statements and the order of the area elements within the statements. All elements are stored contiguously in one block.

At the beginning of program execution, the contents of the common block are undefined; the data may be stored in the block by input/output or assignment statements.

Examples:

COMMON I(5), A(6), B(4)

Area reserved for I = 5 words Area reserved for A = 12 words Area reserved for B = $\frac{8}{2}$ words

Common area 25 words

	Common Block		
Origin	I	(1)	
	I	(2)	
	I	(3)	
	I	(4)	
	I	(5)	
	A	(1)	
	Α	(1)	
	Α	(2)	
	A	(2)	
	A	(3)	
	A	(3)	
	Α	(4)	
	A	(4)	
	A	(5)	
	A	(5)	
	A	(6)	
	A	(6)	
	В	(1)	
	В	(1)	
	В	(2)	
	В	(2)	
	В	(3)	
	В	(3)	
	В	(4)	
	В	(4)	

Correspondence of Common Blocks

Each subprogram that uses the common block must include a COMMON statement. Each subprogram may assign different variable and array names, and different array dimensions, however, if corresponding quantities are to agree, the types should be the same for corresponding positions in the block.

Examples:

MAIN PROG COMMON I(5), A(6), B(4)

:

SUBPROG1 COMMON J(3), K(2), C(5), D(5)

	PROG rence	Com				ROG1 rence
I	(1)	integ	ger	1	J	(1)
I	(2)	integ	ger	2	J	(2)
I	(3)	integ	ger	3	J	(3)
I	(4)	integ	ger	4	K	(1)
I	(5)	integ	ger	5	K	(2)
A	(1)	real	1		С	(1)
A	(1)	real	1		С	(1)
A	(2)	real	2		С	(2)
A	(2)	real	2		С	(2)
A	(3)	real	3		С	(3)
A	(3)	real	3		С	(3)
A	(4)	real	4		С	(4)
A	(4)	real	4		С	(4)
A	(5)	real	5		С	(5)
A	(5)	real	5		С	(5)
А	(6)	real	6		D	(1)
А	(6)	real	6		D	(1)
В	(1)	real	7		D	(2)
В	(1)	real	7		D	(2)
В	(2)	real	8		D	(3)
В	(2)	real	8		D	(3)
В	(3)	real	9		D	(4)
В	(3)	real	9		D	(4)
В	(4)	real	10		D	(5)
В	(4)	real	10		D	(5)

If portions of a common block are not referred to by a particular subprogram, dummy variables may be used to provide correspondence in reserved areas.

Examples:

MAIN PROG COMMON I(5), A(6), B(4)
.

SUBPROG2 COMMON J(17), B(4)

MAIN PRO			PROG2 erence	
I (1)	integer	-	(1)	
I (2)	integer			J (17) is a dummy
I (3)	integer			array. It is not
I (4)	integer			referenced in
I (5)	integer	5 J	(5)	SUBPROG 2 but pro-
A (1)	real 1	J	(6)	vides proper corre-
A (1)	real l	J	(7) s	spondence in reserved
A (2)	real 2	J	(8)	areas so that
A (2)	real 2	J	(9)	SUBPROG 2 can refer
A (3)	real 3	J	(10) t	to array B.
A (3)	real 3	J	(11)	
A (4)	real 4	J	(12)	
A (4)	real 4	J	(13)	
A (5)	real 5	J	(14)	
A (5)	real 5	J	(15)	
A (6)	real 6	J	(16)	
A (6)	real 6	J	(17)	
B (1)	real 7	В	(1)	
B (1)	real 7	В	(1)	
B (2)	real 8	В	(2)	
B (2)	real 8	В	(2)	
B (3)	real 9	В	(3)	
B (3)	real 9	В	(3)	
B (4)	real 10	В	(4)	
B (4)	real 10	В	(4)	

The length of the common block may differ in different subprograms, however, the subprogram (or main program) with the longest common block must be the first to be loaded at execution time.

EQUIVALENCE

The EQUIVALENCE statement permits sharing of storage by two or more entities. The statement has the form:

EQUIVALENCE
$$(k_1)$$
, (k_2) ,..., (k_n)

in which each k is a list of the form:

Each a is either a variable name or a subscripted variable; the subscript of which contains only constants. The number of subscripts must correspond to the number of subscripts for the related array declarator.

All names in the list may be used to represent the same location. If an equivalence is established between elements of two or more arrays, there is a corresponding equivalence between other elements of the arrays; the arrays share some storage locations. The lengths may be different or equal.

Examples:

DIMENSION A(5), B(4)
EQUIVALENCE (A (4), B (2))

Array l Name	Array 2 Name	Quantity Element
A (1)		real l
		real l
A (2)		real 2
		real 2
A (3)	B (1)	real 3
		real 3
A (4)	B (2)	real 4
• •		real 4
A (5)	B (3)	real 5
		real 5
	B (4)	real 6
	, ,	real 6

The EQUIVALENCE statement establishes that the names A(4) and B(2) identify the fourth real quantity. The statements also establish a similar correspondence between A(3) and B(1), and A(5) and B(3).

An integer array/or variable may be made equivalent to a real array or variable; equivalence may be established between different types. The variables may be with or without subscripts.

The effect of an EQUIVALENCE statement depends on whether or not the variables are assigned to the common block. When two variables or array elements share storage, the symbolic names of the variables or arrays may not both appear in COMMON statements in the same subprogram. The assignment of storage to variables and arrays declared in a COMMON statement is determined on the basis of their type and the array declarator. Entities so declared are always contiguous according to the order in the COMMON statement. The EQUIVALENCE statement must not alter the origin of the common block, but arrays may be defined so that the length of the common block is increased.

Examples:


a) Effect of EQUIVALENCE, variables not in common block:

PKOGRAMMER		OA"!	PROCHAM
C		S" ATEMEN	
5 c 7 'S	26 25 1.	4	44
DIMENSION I (4), J(2), K(5)	
EQUIVALENCE (I(3), K(2))		

storage is assigned as follows:

Arrays		ays	Quantiti	les
	I(1)		integer	1
	I(2)	K(1)	integer	2
	I(3)	K(2)	integer	3
	I(4)	K(3)	integer	4
		K(4)	integer	5
		K(5)	integer	6
	J(1)		integer	7
	J(2)		integer	8

b) Effect of EQUIVALENCE, some variables in common block:



storage is assigned as follows:

Arrays	<u>Quantities</u>	
I(1)	integer l	
I(2) K(1)	integer 2	
I(3) K(2)	integer 3	Common block
I(4) K(3)	integer 4	
J(1) K(4)	integer 5	
J(2) K(5)	integer 6	
J(2) K(5)	integer 6	

c) Effect of EQUIVALENCE on the length of the common block:

PRO	GRAMM																							D	ATE						PRO	GRAI	W					
	Labe!		ZOO											-										•	•		-	9	STATE	MEN	ıΤ				 			
1	Labe:	5	6		1				15				20					25				9	C			35			40				45			50		
		-		Ι	ME	N	S]	[0	N	ı	<	(7)									T							Γ								
\prod				0	M٨	10	N	I		(4),		J	(2)			ì										Γ			-	Ī			Ī	
			E	Q	U]	[V	ΑL	E	N	CI	=[- (J	(1)	,		K	(4))											Γ	Γ	Ţ	,	Γ	

storage is assigned as follows:

Arrays	Quantities	
I(1)	integer l	
I(2) K(1)	integer 2	
I(3) K(2)	integer 3	
I(4) K(3)	integer 4	common block
J(1) K(4)	integer 5	
J(2) K(5)	integer 6	
K(6)	integer 7	
K(7)	integer 8	

The value of the subscripts for an array being made equivalent to another array should not be such that the origin of the common block is changed (for example, EQUIVALENCE (I(3), K(4)).

Arr	ays	Quantities
	$K(1) \leftarrow \begin{array}{c} \text{origin} \\ \text{changed} \end{array}$	integer l
origin - I(1)	K(2)	integer 2
I(2)	K(3)	integer 3
I(3)	K(4)	integer 4
I(4)	K(5)	integer 5
J(1)	K(6)	integer 6
J(2)	K(7)	integer 7

If contradictory EQUIVALENCE relationships are specified, a diagnostic message is printed.

Example:

		Name of the State

SECTION V CONTROL STATEMENTS

Program execution normally proceeds from statement to statement as they appear in the program. Control statements can be used to alter this sequence or cause a number of iterations of a program section. Control may be transferred to an executable statement only; a transfer to a non-executable statement will result in a program error which is usually recognized during compilation as a transfer to an undefined label.* With the DO statement, a predetermined sequence of instructions can be repeated a number of times with the stepping of a simple integer variable after each iteration.

Statements are labelled by unsigned numbers, 1 through 9999, which can be referred to from other sections of the program. A label up to four digits long precedes the FORTRAN statement and is separated from it by at least one blank or a zero. Imbedded blanks and leading zeros in the label are ignored: 1, 01, 0 1, 0001 are identical.

GO TO STATEMENTS

GO TO statements provide transfer of control.

This statement, an unconditional GO TO, causes the transfer of control to the statement labelled k.

GO TO
$$(k_1, k_2, \ldots, k_n)$$
, i

This statement, a computed GO TO, acts as a many-branched transfer. The k's are statement labels and i is a simple integer variable. Execution of this statement causes the statement identified by the label k_j to be executed next, where j is the value of i at the time of execution, and $1 \le j \le n$. If i < 1, a transfer to k_j occurs; if i > n, a transfer to k_j occurs.

^{*}A transfer to a FORMAT statement is not detectable during compilation; if such an error occurs, no diagnostic message is produced.

Examples:

PROGR	AMMER									D	ATE			PROGRAM		
_		voz										STA	TEMEN	41		
1	Label 5	T 6	7	10	15		26	25	30		35		40	45		50
	ΙØ		GO	TO.	5ØØ								Т			
			ISW	СН	= 2								1			
	35		Δ =	X*	FΥ								T			
				Τ												
		П														
	4ø		GO	TO.	(5,		5, 2	2Ø),	ISWC	Н					-1-	
	5øø		JSW	СН	= I	SWCH	+	I.								
	54Ø		GO .	TO	(25	,3Ø,	35,	4Ø)	, JSW	СН		Í				
+	34 W	11	30	I O	1 25	, Sp,	၁၂၁ ,	401	, 03.44	СП			+			

At statement 40, control transfers to statement 10, which is an unconditional transfer to statement 500. At 540 control transfers to statement 35.

IF STATEMENTS

The arithmetic IF statement provides conditional transfer of control

IF
$$(e)k_1, k_2, k_3$$

The e is an arithmetic expression and the k's are statement labels. The arithmetic IF is a three-way branch. Execution of this statement causes evaluation of the expression and transfer of control depending on the following conditions:

$$e < 0$$
, go to k_1

$$e = 0$$
, go to k_2

$$e > 0$$
, go to k_3

Examples:

Programmer	DATE		PROGRAM	
C C C C C C C C C C C C C C C C C C C	30 35	STATEMEN 40	T 45	50
IF (A)5, IØ, I5				
IF (X**Y*COS(Z)+W)5,35	5, 15			


The logical IF statement provides conditional transfer of control to either of two statements:

The e is an arithmetic expression that may yield a negative or non-negative (positive or zero) value. Execution of this statement causes evaluation of the expression and transfer of control under the following conditions:

e < 0, go to
$$k_1$$

e \geq 0, go to k_2

Examples:



DO STATEMENTS

A DO statement makes it possible to repeat a group of statements.

DO n i =
$$m_1, m_2, m_3$$

or
DO n i = m_1, m_2

The n is the label of an executable statement which ends the group of statements. The statement, called the terminal statement, must physically follow the DO statement in the source program. It may not be a GO TO of any form, IF, RETURN, STOP, PAUSE, or DO statement.

The i is the control variable; it may be a simple integer variable.

The m's are indexing parameters: m_1 is the initial parameter; m_2 , the terminal parameter; and m_3 , the incrementation parameter. They may be unsigned integer constants or simple integer variables. At time of execution, they all must be greater than zero. If m_3 does not appear (second form), the incrementation value is assumed to be 1.

A DO statement defines a loop, as shown in the flowchart of Figure 5-1. Associated with each DO statement is a range that is defined to be those executable statements following the DO, to and including the terminal statement associated with the DO. At time of execution, the following steps occur:

- The control variable is assigned the value of the initial parameter.
- 2. The range of the DO is executed.
- 3. The terminal statement is executed and the control variable is increased by the value of the incrementation parameter.
- 4. The control variable is compared with the terminal parameter. If less than or equal to the terminal parameter, the sequence is repeated starting at step 2. If the control variable exceeds the terminal parameter, the DO loop is satisfied and control transfers to the statement following n. The control variable becomes undefined.

Should m_1 exceed m_2 on the initial entry to the loop, the range of the DO is executed and control passes to the statement after n. If a transfer out of the DO loop occurs before the DO is satisfied, the current value of the control variable is preserved. The control variable, initial parameters, terminal parameter, and incrementation parameters may not be redefined during the execution of the range of the DO loop.


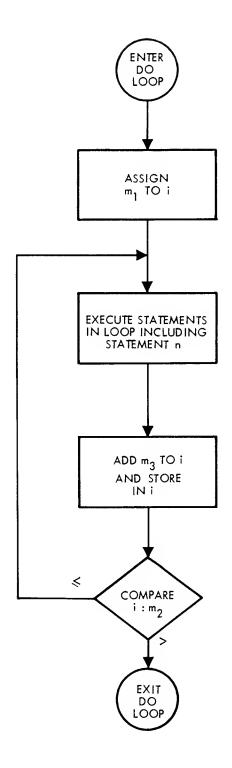



Figure 5-1. Example of a DO Loop

DO Nests

When the range of a DO loop contains another DO loop, the latter is said to be nested. DO loops may be nested 10 deep. The last statement of a nested DO loop must be the same as the last statement of the outer loop or occur before it. If d_1, d_2, \ldots, d_n are DO statements, which appear in the order indicated by the subscripts; and if n_1, n_2, \ldots, n_m are the respective terminal statements, then n_m must appear before or be the same as n_{m-1} , n_{m-1} must appear before or be the same as n_2 , and n_2 must appear before or be the same as n_1 .

Examples:

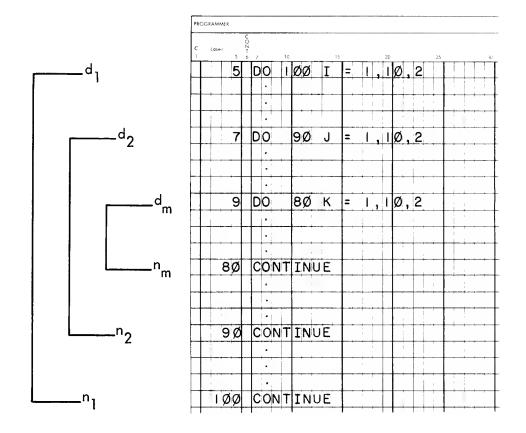


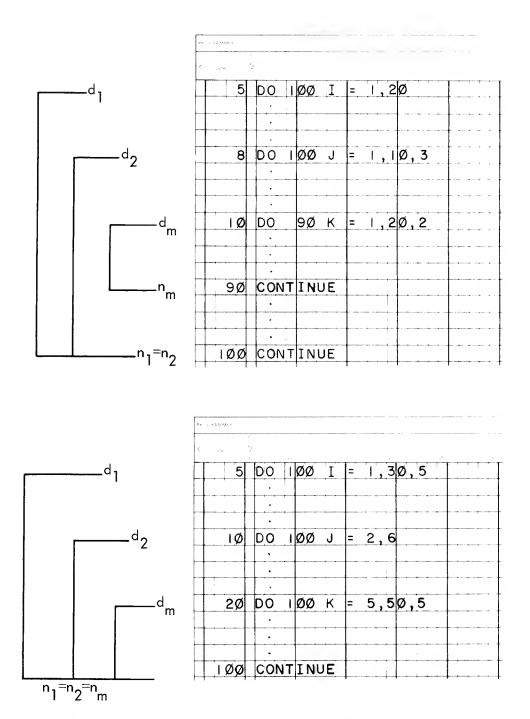

If one or more nested loops have the same terminal statement, when the inner DO is satisfied, the control variable for the next outer loop is incremented and tested against its associated terminal parameter. Control transfers to the statement following the terminal statement only when all related loops are satisfied.


DO loops may be nested in common with other loops as long as their ranges do not overlap.

Examples:

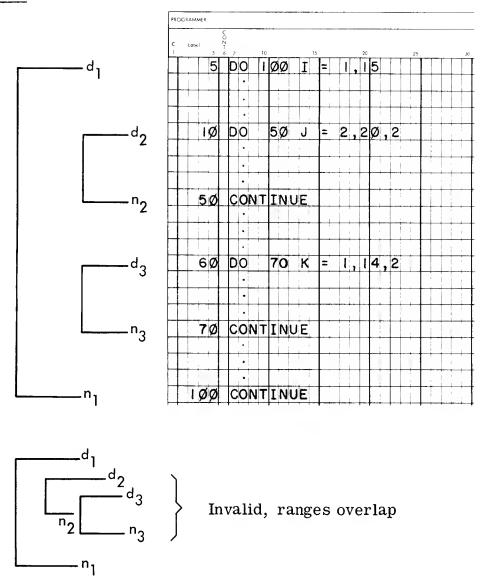

In a DO nest, a transfer may be made from an inner loop into an outer loop, and transfer is permissible outside of the loop. It is illegal, however, for a GO TO or IF to initiate a transfer of control from outside of the range of a DO into its range.

When nested DO loops have the same terminal statement, a transfer to that terminal statement causes a transfer to the innermost logs of the nest. When this transfer occurs, the current value of the control variable for the innermost loop is incremented and that loop is executed until its range is satisfied, etc.

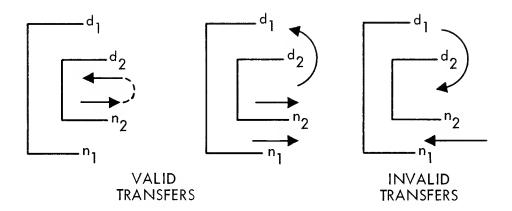

CONTINUE

This statement acts as no-operation instruction.

CONTINUE

The CONTINUE statement is most frequently used as the last statement of a DO loop to provide a loop termination when a GO TO or IF would normally be the last statement of the loop. If used elsewhere in the source program, it acts as a do-nothing instruction and control passes to the next sequential program statement.

PAUSE

This statement provides a temporary program halt.

PAUSE n

or

PAUSE

n may be up to four octal digits (without a B suffix) in the range 0 to 7777. This statement halts the execution of the program and types PAUSE on the standard output unit. The value of n, if given is in the A-Register. Program execution resumes at the next statement.

STOP.

The STOP statement terminates the execution of the program.

STOP n

or

STOP

n may be up to four octal digits (without a B suffix) in the range 0 to 7777. This statement halts the execution of the program and types STOP on the standard output unit. The value of n, if given, is in the A-Register.

END

The END statement indicates the physical end of a program or subprogram. It has the form:

END name

The END statement is required for every program or subprogram. The name of the program can be included, but it is ignored by the compiler. The END statement is executable in the sense that it will effect return from a subprogram in the absence of a RETURN statement. An END statement may be labelled and may serve as a junction point.

END\$

The END\$ statement indicates the physical end of five or less programs or subprograms that are to be compiled at one time. If there are four or less programs, the statement is printed on the source program listing. If there are exactly five, the statement is not printed. If more than five programs are on the same tape, the END\$ may be omitted after the fifth program; the compiler stops accepting input after the fifth is processed.

SECTION VI

MAIN PROGRAM, FUNCTIONS, AND SUBROUTINES

A FORTRAN program consists of a main program with or without subprograms. Subprograms, which are either functions or subroutines, are sets of statements that may be written and compiled separately from the main program.

The main program calls or references subprograms; and subprograms may call or reference other subprograms as long as the calls are non-recursive. That is, if program A calls program B, subprogram B may not call program A. Furthermore, a program or subprogram may not call itself. A calling program is a main program or subprogram that refers to another subprogram.

In addition to multi-statement function subprograms, a function may be defined by a single statement in the program (statement function) or it may be defined as basic external function. A statement function definition may appear in a main program or subprogram body and is available only to the main program or subprogram containing it. A statement function may contain references to function subprograms, basic external functions, or other previously defined statement functions in the same subprogram. Basic external function references may appear in the main program, subprogram, and statement functions.

Main programs, subprograms, statement functions, and basic external functions communicate by means of arguments (parameters). The arguments appearing in a subroutine call or function reference are <u>actual</u> arguments. The corresponding entities appearing with the subprogram, statement function, or basic external function definition are the dummy arguments.

ARGUMENT CHARACTERSITICS

Actual and dummy arguments must agree in order, type, and number. If they do not agree in type, errors may result in the program execution, since no conversion takes place and no diagnostic messages are produced.

Within subprograms, dummy arguments may be array names or simple variables; for statement functions, they may be variables only. Dummy arguments are local to the subprogram or statement function containing them and, therefore, may be the same as names appearing elsewhere in the program. A maximum of 63 dummy arguments may be used in a function or subroutine.

No element of a dummy argument list may appear in a COMMON or EQUIVALENCE statement within the subprogram. If it does, a compiler diagnostic results. When a dummy argument represents an array, it should be declared in a DIMENSION statement within the subprogram. If it is not declared, only the first element of the array will be available to the subprogram and the array name must appear in the subprogram without subscripts.

Actual arguments appearing in subroutine calls and function references may be any of the following:

A constant
A variable name
An array element name
An array name
Any other arithmetic expression

MAIN PROGRAM

The first statement of a main program may be the following:

PROGRAM name

The name is an alphanumeric identifier of up to five characters. If the PROGRAM statement is omitted, the compiler assigns the name "FTN."

SUBROUTINE SUBPROGRAM

An external subroutine is a computational procedure which may return none, one, or more than one value through its arguments or through common storage. No value or type is associated with the name of a subroutine.

The first statement of a subroutine subprogram gives its name and, if relevant, its dummy arguments.

The symbolic name, s, is an alphanumeric identifier of up to five characters by which the subroutine is called. If the subroutine is unnamed the compiler will assign the name of "." (period). The a's are the dummy arguments of the subroutine.

The name of the subroutine must not appear in any other statement within the subprogram.

The subroutine may define or redefine one or more of its arguments and areas in common so as to effectively return results. It may contain any statements except FUNCTION, another SUBROUTINE statement, or any statement that directly or indirectly references the subroutine being defined. It must have at least one RETURN or END statement which returns control to the calling program.

Examples:

	Lobel	5	00Z+6	,			10					15					20					25				
T		П			U	8		0	U	T	I	N	Ε			I	V	(P	,	W	,	Н)		
T	П			z	=	5	Γ.	Г	*	W	+	P	*	*	3											
T	11	П	1	4	=	Z	_	3	_		Г					Г	П						Г		Г	ľ
T	П		-	₹	E	T	U		N				Г					Г			П		Г			ľ
ļ	\prod		•	_	N	I	Ĺ	Ĺ					Ш													
+	+	+1	+	-	_	-		\vdash	-	-	-	_	H		_	-		L		-	H		H		_	
ļ																		L						_		
+	++	+		s	U	В	R	0	υ	Т	I	N	E		M	U	L	(K)	-	_	H		-	
T		П		C			Μ	_				Α		(_	Ø)				0	D	(1	Ø	ľ
T	\sqcap	П	Ī	5	O		5	Γ	I	=	ı	,		1	Ø			ľ								ľ
T	\Box	5	1	>	R	0	D	(I)	=	M	A	T	(I)	*	K				Г			ľ
T				R	E	Т	U	R	N	_	_					Г		Г		Г					Г	-
t	П	\top		=	N	ח	Г	T	Г			Г	Γ	_				Г			Г	Г				Ì

P,W and H are the dummy parameters. Actual values supplied by a calling program are to be substituted for P and W. The variable name supplied for H would contain the result on return to the calling program.

MUL multiplies the array supplied for MAT by the single value supplied for K to produce values to be stored in array PROD.

SUBROUTINE CALL

The executable statement in the calling program for referring to a subroutine is:


The symbolic name, s, identifies the subroutine being called; the a's define the actual arguments. The name may not appear in any specification statements in the calling program.

If an actual argument corresponds to a dummy argument that is defined or redefined in the called subprogram, the actual argument must be a variable name, an array element name, or an array name.

The CALL statement transfers control to the subroutine. Execution of the subroutine results in an association of actual arguments with all appearances of dummy arguments in executable statement and function definition statements. If the actual argument is an expression, the association is by value

rather than by name. Following these associations, the statements of the subprogram are executed. When a RETURN or END statement is encountered, control is returned to the next executable statement following the CALL in the calling program. If the CALL statement is the last statement in a DO loop, looping continues until satisfied.

Examples:

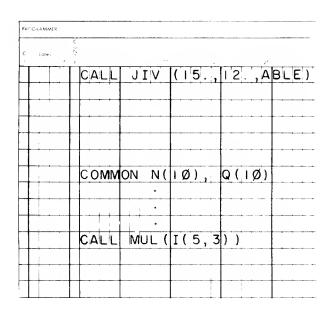

These calls provide actual arguments for the subroutines defined in the previous example. In subroutine JIV, 15. is substituted for P; 12., for W; and ABLE, for H. For subroutine MUL, the data is passed via COMMON. The value supplied for the dummy argument K is element (5,3) of matrix I of the calling program.

FUNCTION SUBPROGRAM

A function subprogram is a computational procedure which returns a single value associated with the function name. The type of the function is determined by the name; an integer quantity is returned if the name begins with I, J, K, L, M, or N, otherwise it will be a real quantity.

The first statement of a function subprogram must have the following form:

FUNCTION f
$$(a_1, a_2, \ldots, a_n)$$

The symbolic name, f, is an alphanumeric identifier of up to five characters by which the function is referenced. If the function is unnamed the compiler will assign the name of "." (period). The a's are the dummy arguments of the function.

The name of the function cannot appear in any non-executable statement within the subprogram. It must be used in the subprogram, however, at least once as any of the following:

The left-hand identifier of an assignment statement

An element of an input list

An actual parameter of a subprogram reference

The value of name at the time of execution of a RETURN or END statement in the subprogram is called the value of the function.

The function subprogram may define or redefine one or more of its arguments and areas in common so as to effectively return results in addition to the value of the function. If the subprogram redefines variables contained in the same expression as the function reference, the evaluation sequence of the expression must be taken into account. Variables in the portion of the expression that is evaluated before the function reference is encountered and the values of variable subscripts are not affected by the execution of the function subprogram. Variables that appear following the function reference are modified according to the subprogram processing.


Examples:

C Label	uoz.	•																
1	6 7		10				15			_	20		_	_		25	_	
	F	UN	СІТ	I	0	N	I	D	I	V	(Ι	١,	J)		١.	
	İΙ	DΙ	vI≃	I	1	J	\neg								ļ			Γ
	R	FT	UR	N			1	T		Г	Г		Г	Г	Ī	Г	T	Г
	F	NO.	-			H	\top	t	П		-	T		-		Г	T	T
	1 -	100	+	┾	-	Н	-+-	+-	₩	-	-	⊢	⊢	1	┿	-	╀─	+


The function IDIV calculates the value of I divided by J. On return to the calling program the result provided is the value of IDIV.

C 1		Lobel	5	0ZT-6	,			10					15					20					25			
	I				F	U	Ν	С	Т	I	0	N		Ι	R	Ε	Α	D		(I	U	N	T)	
Γ	I	İΙ																								
Г	Γ	П				•																				
	T	П	Ī	Γ					Г																	
Γ	Ī			Γ	R	Ε	Α	D	(Ι	U	N	Ī	,	*)	Ι	R	E	Α	D					
Γ	T	П		Γ					Γ		Γ															
Γ	T	T		Ī					Γ										Γ							
Γ	T	П		Γ										Γ					Γ	Г		Γ				
Г	T	П		Γ	R	Ε	T	U	R	N														Γ		
٢	٢	11	1	T	E	N	D		T					Г										Γ		Γ

The function IREAD reads a value from the unit IUNT (specified as an actual parameter in the calling program.) IREAD has this value on return to the calling program.

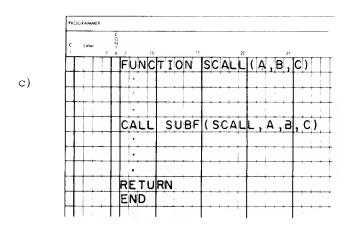

SCALL is both the function name and an actual parameter of a subroutine call. The value of SCALL is provided by SUBF and returned to the calling program.

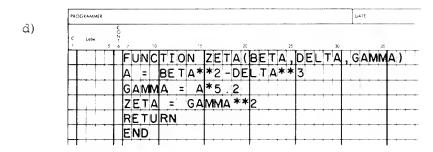

The function defines the value of GAMMA as well as finding the value of ZETA.


FUNCTION REFERENCE

A function subprogram is referenced by using the name and arguments in an arithmetic expression:


$$f(a_1, a_2, ..., a_n)$$

The type of function depends on the first letter of the name of the function referenced; the a's are the actual arguments. The reference may appear any place in an expression as an operand. The evaluated function will have a single value associated with the function name. When a function reference is encountered in an expression, control is transferred to the function indicated. Execution of the function results in an association of actual arguments with all appearances of dummy arguments in executable statements and function definition statements. If the actual argument is an expression, this association is by value rather than by name. Following these associations, the statements of the subprogram are executed. When a RETURN or END statement in the function subprogram is encountered, control returns to the statement containing the function reference. During execution the function also may define or redefine one or more of its arguments and areas in common.

Example:

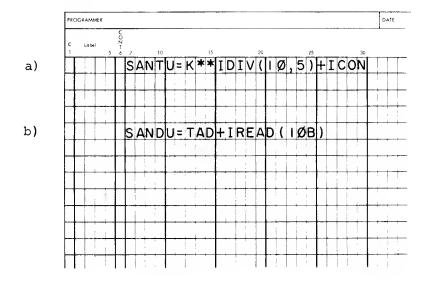


- a) The values of 10 and 5are provided for I andJ: The resulting valueof IDIV would be 2.
- b) The function IREAD is called with 10B as the unit number. The value of IREAD would be the value of the item read from the device with unit reference number 108.

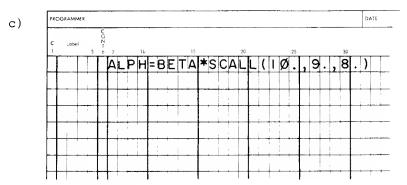

The actual parameters SCALL are 10., 9., and 8. The value of SCALL would depend on the value supplied by the subroutine SUBF.

d) The program,



would result in the following calculation:

$$RSLT = 5.0 + 7.5 + ZETA$$

where ZETA would be determined as:

$$A = .2**2 - .3**3 = .04 - .027 = .013$$


$$GAMMA = .013*5.2 = .0676$$
 (GAMMB is not altered)

ZETA = .0676**2 = .00456976

RSLT = 5.0 + 7.5 + .00456976

= 12.50456976

But, the program,



would result in the following calculations for ZETA and GAMMB:

$$A = .2**2 - .3**3 = .04 - .027 = .013$$

GAMMA = .013*5.2 = .0676 = GAMMB

ZETA = .0676**2 = .00456976

RSLT = .00456976 + 7.5 + .0676

= 7.57216976

When referring to a function which redefines an argument which appears as a variable elsewhere in the same expression, the order of evaluation (i.e., the order in which the expression is stated) is significant.

STATEMENT FUNCTION

A statement function is defined internally to the program or subprogram in which it is referenced and must precede the first executable statement. The definition is a single statement similar in form to an arithmetic assignment statement.

$$f(a_1, a_2, ..., a_n) = e$$

The name of the statement function, f, is an alphanumeric identifier; a single value is associated with the name. The dummy arguments, a's, must be simple variables. One to ten arguments may be used. The expression, e, may be an arithmetic expression and may contain references to basic external functions, previously defined statement functions, or function subprograms. The dummy arguments must appear in the expression. Other variables appearing in the expression have the same values as they have outside the statement function.

The statement function name must not appear in any specification statements in the program or subprogram containing it.


Statement functions must precede the first executable statement of the program or subprogram, but they must follow all specification statements.

A statement function reference has the form:

$$f(a_1, a_2, ..., a_n)$$

f is the function name and the a's are the actual arguments. A function reference with its appropriate actual arguments may be used to define the value of an actual argument in a subroutine call or function subprogram reference.

Example:

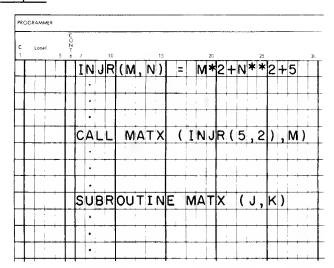


Statement function definition.

Subroutine call using statement function reference.


Execution of a statement function reference results in an association of actual argument values with the corresponding dummy arguments in the expression of the function definition, and evaluation of the expression. Following this, the resultant value is made available to the expression that contained the function reference and control is returned to that statement.

Example:

Statement function:



Function reference:



BASIC EXTERNAL FUNCTIONS

Certain basic functions are defined in FORTRAN. When one of these appears as an operand in an expression, the Compiler generates the appropriate calling sequence within the object program.

The types of these functions and their arguments are defined. The compiler recognizes the basic function and associates the type with the results. The actual arguments must correspond to the type required for the function; if not, a diagnostic message is issued. The functions available are shown in Table 6-1.

Table 6-1 FORTRAN Functions and Arguments

Function Name	Definition	Symbolic Name	No. of Arguments	Type Argument	of Function
Absolute Value	a	ABS IABS	1 1	Real Integer	Real Integer
Float	Conversion from in- teger to real	FLOAT	1	Integer	Real
Fix	Conversion from real to integer	IFIX	1	Real	Integer
Transfer sign	Sign of a	SIGN ISIGN	2 2	Real Integer	Real Integer
Exponential	times a1	EXP	1	Real	Real
Natural Logarithm	log (a)	ALOG	1	Real	Real
Trigonometric Sine	sine (a)†	SIN	1	Real	Real
Trigonometric Cosine	cos (a)†	cos	1	Real	Real
Trigonometric Tangent	tan (a)†	TAN	1	Real	Real
Hyperbolic Tangent	tanh (a)	HNAT	1	Real	Real
Square Root	(a) ^{1/2}	SQRT	1	Real	Real
Arctangent	arctan (a)	ATAN	1	Real	Real
And (Boolean)	a ₁ ^ a ₂	IAND	2	Integer	Integer
Or (Boolean)	a_v a_ 1 2	IOR	2	Integer	Integer
Not (Boolean) Sense Switch	na Sense Switch Register switch (n)	NOT ISSW	1 1	Integer Integer	Integer Integer
	i				

ta is in radians

Examples:

ROGRAMMER		Δ*.	PRI C-RAM
Lane	C O		STATEMEN"
ПТ	SIGND=A+B*C/D-E		4 4
 	SIGNN=ABS(SIGND)		
	Y=FLOAT(NEWT)		
1	ISGND=I+J*K/L-M		
	ISGNN=IABS(ISGND)		
	IAL = JACK*KEN*LARRY		
	ISAL = ISIGN(IAL, ISGNN)		
	POWR = EXP(X)		
	ANTLG=ALOG(Y)		
	OOHYP=SIN(AGL)		
	AOHYP=COS(AGL)		
	OOAH = TANH (AGLH)		
	HFPR =SQRT(Z)		
	ARC = ATAN(S)		
	LPROD=IAND(M,N)		
	LSUM = IOR (M, N)		
	LCLMT=NOT(M)		

RETURN AND END STATEMENTS

A subprogram normally contains a RETURN statement that indicates the end of logic flow within the subprogram and returns control to the calling program. It must always contain an END statement.

In function subprograms, control returns to the statement containing the function reference. In subroutine subprograms, control returns to the next executable statement following the CALL. A RETURN statement in the main program is interpreted as a STOP statement.

The END statement marks the physical end of a program, subroutine subprogram, or function subprogram. If the RETURN statement is omitted, END causes a return to the calling program. The END\$ is required in addition to END statements when five or less subprograms are being compiled at one time.

		_
		_

SECTION VII INPUT/OUTPUT LISTS AND FORMAT CONTROL

Data transmission between internal storage and external equipment requires an input/output statement and, for ASCII character strings, either a FORMAT statement or format control symbols with the input data. The input/output statement specifies the input/output process, such as READ or WRITE; the unit of equipment on which the process is performed; and the list of data items to be moved. The FORMAT statements or control symbols provide conversion and editing information between the internal representation and the external character strings. If the data is in the form of strings of binary values, format control is unnecessary.

INPUT/OUTPUT LISTS

The input list specifies the names of the variables and array elements to which values are assigned on input. The output list specifies the references to the variables, array elements, and constants whose values are transmitted. The input and output lists are of the same form. The list elements consist of variable names, array elements, and array names separated by commas. The order in which the elements appear in the list is the sequence of transmission. If FORMAT statements are used, the order of the list elements must correspond to the order of the format descriptions for the data items. In array elements buffer length is limited to a maximum output of 60 computer words.

Supscripts in an input/output list may be of the form (\exp_1, \exp_2) , where \exp_i is one of the following:

where c and k are integer constants and v is a simple integer variable previously defined or defined within an implied DO loop.

DO-IMPLIED LISTS

A DO-implied list consists of one or more list elements and indexing parameters. The general form is

$$(...(list, i = m_1, m_2, m_3)...)$$

list Any series of arrays, array elements, or variables separated by commas

i Control variable

m's Index parameters in the form of unsigned integer constants or predefined integer variables

Data defined by the list elements is transmitted starting at the value of m_1 in increments of m_3 until m_2 is exceeded. If m_3 is omitted it is assumed to be one.

An implied DO loop may be used to transmit a simple variable or a sequence of variables more than one time.

Two-dimensional arrays may appear in the list with values specified for the range of the subscripts in an implied DO loop. The general form for an array is:

$$((a(d_1,d_2),i_1 = m_1, m_2, m_3), i_2 = n_1, n_2, n_3)$$

where,

a An array name

 $\mathbf{d_1}$, $\mathbf{d_2}$ Subscripts of the array in one of the preceding forms

i₁, i₂ Control variables representing either of the variables subscripts d_1 and d_2

m's, n's Index parameters in the form of unsigned integer constants or predefined integer variables. If m_3 or n_3 is omitted, it is construed as 1.

The input/output list may contain nested implied DO loops. During execution, the control variables are assigned the values of the initial parameters ($i_1 = m_1$, $i_2 = n_1$). The first control variable defined in the list is incremented first. When the first control variable reaches the maximum value, it is reset; the next control variable to the right is incremented and the process is repeated until the last control variable has been incremented.

If the name of a dimensioned array appears in a list without subscripts, the entire array is transmitted.

Examples:

- a) The DO-implied list
 ((A(I,J), I=1, 20, 2), J=1, 50,5)
 replaces the following:
 DO x J=1, 50, 5
 DO x I=1, 20, 2
 transmit A (I,J)
- x CONTINUE
- b) Other implied DO loops might be:
 ((ABLE(5*KID-3, 100*LID), KID=1, 100), LID=1, 10)
 ((A(I,J), I=1, 5),J=1, 5) Transmit elements by column
 ((A(I,J), J=1, 5),I=1, 5) Transmit elements by row.
- c) Nested implied DO loops: $((((A(I,J), B(K,L), K=1,10), L=1,15), I=1,20), J=1,25) \\ (((A(I,J), B(K), K=1,10), I=20,100,10), K=9,90,10)$
- d) Simple variable transmission:(A,K=1, 10) Transmits 10 values of A.

e) Dimensioned array transmission:
DIMENSION A(50,20)

•

... A ... list element

is equivalent to:

DO x I = 1,20

 $DO \times J = 1.50$

transmit A(J,I)

x CONTINUE

FORMAT STATEMENT

ASCII input/output statements may refer to a FORMAT statement which contains the specifications relating to the internal-external structure of the corresponding input/output list elements.

$$\texttt{FORMAT (spec}_1, \ldots, \ \texttt{r(spec}_m, \ldots), \ \texttt{spec}_n, \ldots)$$

The spec's are format specifications and r is an optional repetition factor which must be an unsigned integer constant. FORMAT specifications may be nexted to a depth of one level. The FORMAT statement is non-executable and may appear anywhere in the program.

FORMAT Statement Conversion Specifications

The data elements in the input/output lists may be converted from external to internal and from internal to external representation according to FORMAT conversion specifications. (If the type of a variable in the input/output list does not correspond to the type specified in the FORMAT statement, the Formatter insures that the proper conversion from one type to the other will take place.) FORMAT statements may also contain editing codes.

Conversion Specifications

Editing Specification

nX Blank field descriptor

nHh₁ h₂...h_n Heading and labeling descriptors

r"h₁ h₂...h_n" Specification should not be on more than one line.

If continuation is necessary, specification should be broken up in two specifications.

r/ Begin new record

Both w and n are nonzero integer constants representing the width of the field in the external character string; n may be omitted if the width is one. d is an integer constant representing the number of digits in the fractional part of the string. r, the repeat count, is an optional nonzero integer constant indicating the number of times to repeat the succeeding basic field descriptor. Each h is one character.

Ew.d Output

The E specification converts numbers in storage to character form for output.

The field occupies w positions in the output record; the number appears in floating point form right justified in the field as:

$$\underline{\Lambda}.X_1...X_d$$
 E+ee[†]

 $x_1...x_d$ are the most significant digits of the value of the data to be output. ee are the digits in the exponent. Field w must be wide enough to contain significant digits, signs, decimal point, E, and exponent. Generally, w should be greater than or equal to d+4.

If the field is not long enough to contain the output value, an attempt is made to adjust the value of d (i.e., truncating part or all of the fraction) so that a number is written in the field. If the remaining value is still to large for the field, dollar signs (\$) are inserted in the entire field. If the field is longer than the output value, the quantity is right-justified with spaces to the left.

Examples:


PROGRAMMER		
C Labe	C O N	
	WRITE (4,5)A	A contains +12.34 or -12.34
5	FORMAT(EIO.3)	Result is $\wedge \wedge$. 123E+02 or \wedge 123E+02
	WRITE(4,5)A	A contains +12.34 or -12.34
5	FORMAT(E12.3)	Result is $\wedge \wedge \wedge \wedge .123E+02$ or
		.^^^123E+02
	WRITE(4,5)A	A contains +12.34 or -12.34
5	FORMAT(E7.3)	Result is $.12E+02$ or $1E+02$
	WRITE(4,5)A	A contains +12.34
5	FORMAT(E5.1)	Result is \$\$\$\$\$

[†]The caret symbol, $\hat{\ }$, indicates the presence of a space.

Ew.d Input

The E spcification converts the number in the input field (specified by w) to a real number and stores it in the appropriate storage locations.

The input field may consist of integer, fraction, and exponent subfields:



The integer subfield begins with a + or - sign, or a digit and may contain a string of digits terminated by a decimal point, an E, +, -, or the end of the input field.

The fraction subfield begins with a decimal point and may contain a string of digits terminated by an E, +, -, or the end of the input field.

The exponent field may begin with a sign or an E and contains a string of digits. When it begins with E, the + is optional between E and the string. The value of the string of digits should not exceed 38. The number may appear in any positions within the field; spaces in the field are ignored.

Examples:

+1.2345E2

123.456+9

-0.1234-6

.12345E-3


1234

+12345

+12345E6


When no decimal point is present in the input quantity, d acts as a negative power of ten scaling factor. The internal representation of the input quantity will be:

Example:



If a d value in the specification conflicts with the a decimal point appearing in an input field, the actual decimal point takes precedence.

Example:



The field width specified by w should always be the same as the width of the input field. When it is not, incorrect data may be read, converted and stored. The value of w should include positions for signs, the decimal point, the letter E, as well as the digits of the subfields:

Example:

CGRAMME?	DATE		PROGRAM	
C O Loce' N		STATEMEN	rT	
5 6 ° 10 15 20 25 30	35	46	45	50
READ(5, 10) A, B, C				
IØ FORMAT(E7.2,E5.3,E9.2)				

Assuming input data in contiguous fields:

The fields read would be:

-12.3E1

+1234

123.46E-3


and converted as:

-123.

1.234

.12346

However, if specifications were:



The fields read would be:

-12.3E1

+123

4123.46

The effects of possible FORMAT specification errors such as the above may not be detected by the system.

Examples:

FORMAT Specification	Input <u>Field</u>	Converted <u>Value</u>
E9.2	+1.2345E2	123.45
E9.4	-0.1234-6	0000001234
E4.2	1234	12.34

Fw.d Output

The F specification converts real numbers in storage to character form for output. The field occupies w positions and will appear as a decimal number, right justified in the field.

The x's are the most significant digits. The number of decimal places to the right of the decimal point is specified by d. If d is zero, no digits appear to the right of the decimal point. The field must be wide enough to contain the significant digits, sign, and decimal point. If the number is positive, the + sign is suppressed. If the field is not long enough to contain the output value, an attempt is made to adjust the value of d (i.e., truncating part or all of the fraction) so that a number is written in the field. If the remaining value is still too large for the field, dollar signs (\$) are inserted in the entire field. If the field is longer than the output value, the number is right-justified with spaces occupying the excess positions on the left.

Examples:

PROGRAMMER	
C C Label 7	
	1 - 12.34 A contains +12.34 or -12.34
5 FORMAT (FIO. 3	Result: ^^^12.340 or ^^-12.340
WRITE (4,5)A	A contains +12.34 or -12.34
5 FORMAT(FI2.3	Result: ^^^^^12.340 or^^^^ -12.340
WRI TE (4,5) A	A contains +12.34
5 FORMAT (F4.3)	Result: 12.3
WRITE(4,5)A	A contains +12345.12
5 FORMAT (F4.3)	Result: \$\$\$\$

Fw.d Input

The F specification input is identical to the E specification input. Although the fields are generally assumed to contain only a sign, integer, decimal point, and fraction; they may also contain an exponent subfield. All restrictions for Ew.d input apply.

ΙW

The Iw specification converts internal values to output character strings, or input character strings to internal numbers. The output external field occupies w record positions and appears right justified (spaces on left) as:


$$\hat{x}_1 \cdots x_d$$

During input conversion, if a value is less than -32768_{10} , the value is converted to a positive 32767.

The x's represent the decimal digits (maximum of 5) of the integer. When the integer is positive on output, the sign is suppressed. If an output field is too short, dollar signs (\$) will be placed in the output record.


The Iw specification, when used for input, is identical to an Fw.O specification.

Examples:



Result: -123412345\$\$\$\$,12345

$$\left| \leftarrow 5 \right\rangle \left| \leftarrow 5 \right\rangle \left| \leftarrow 4 \right\rangle \left| \leftarrow 6 \right\rangle \left|$$



I contains -0123

J contains 12003

K contains 0102


L contains 3

Αw

This specification (not available in the 4K version of FORTRAN) causes alphanumeric data on an external medium to be translated to or from ASCII form in memory. The associated list element must be of type integer.

On input, if the field, as indicated by w, is greater than 2, the first w-2 characters are ignored; only the last two characters are read. When w equals 2, the two characters are read. If w equals 1, one character is read and stored in the right half of a computer word; zero is entered in the left half.

On output, if the field is greater than 2, two characters are written with right justification in the field; the leading positions are filled with spaces. If w equals 2, the two characters are written. If w equals 1, the character in the right half of the computer word is written.

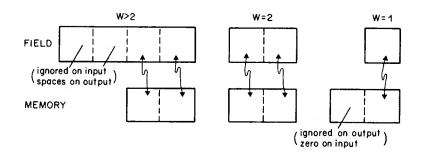

Example:

Input data: AZZ213-ABCXABC137 - ZZ9 (CR) (LF)

DIMENSION ID (5)

READ (5, 10) 12, II, ID

10 FORMAT (A1Ø, A1, 5A2)

Result: 12 BC

Il ØX

ID AB

C1

37

-z

Z9

r @ w, rKw

Octal integer values are converted under either the @ or the K specification. The field is w octal digits in length; the corresponding list element must be of type integer. (Not available in the 4K version of FORTRAN.)

On input, if w is greater than or equal to 6, up to six octal digits are stored; non-octal digits appearing within the field are ignored. If the value of the octal digits within the field is greater than 177777, the results are unpredictable. If w is less than 6, or if less than six octal digits are encountered in the field, the number is right justified in the computer word with zero fill on the left.

On output, if the field is greater than 6, six octal digits are written with right justification in the field; the leading positions are filled with spaces. If w equals 6, the six octal digits are written. If w is less than 6, the w least significant octal digits are written.

Example:

Input data: 123456-1234562342342342, 396-Ø5 CR LF

DIMENSION ID(2), IE(2)

READ (5,10) IB, IC, ID, IE


10 FORMAT (@6, @7, 2@5, 2@4)

Result: IB 123456 IC 123456 ID Ø23423 Ø42342 IE ØØØØ36 ØØØØØ5

<u>n X</u>

The X specification may be used to include n blanks in an output record or to skip n characters on input to permit spacing of input/output quantities. In the specifications list, the comma following X is optional. X is interpreted as 1X. OX is not permitted.


Examples:



Result: ..1234E2....-12.34....-123

Input:

WEIGHT, 10, PRICE, \$1.98, TOTAL, \$19.80



Result: I contains 10

A contains 1.98

B contains 19.80

$^{nHh_1h_2...h_n}$

The H specification provides for the transfer of any combination of 8-bit ASCII characters, including blanks. n is an unsigned integer specifying the number of characters to the right of the H that are to be transmitted. The comma following the H specification is optional. AH is interpreted as 1H. OH is not permitted. An H-specification should not span more than one line. If continuation is necessary the H specification should be broken off in 2H specifications, one on each line.

On output, the ASCII data in the FORMAT statement is written on the unit in the form of comments, titles, and headings.

Example:

PROGNAMMER	DATE		PROGRAM	
Ç		STATEMEN	17	
C Lobe N 1 1 15 26 25 30	35	4	45	4
WRITE(6, 10)				
I O FORMAT (20H THIS IS AN EXA	MPLE)			

Result: THIS IS AN EXAMPLE

П		WRIT	E(6,1	Ø)I,A	, B				
	ΙØ	FORM	AT(8H	WE I GH	T I 2	, I ØH	PRICE	\$,F4	.2,
		CIØH	TOTA	L \$,	F5.2)		'		

I contains 10


A contains 1.98

B contains 19.80

Result: WEIGHT 10 PRICE \$1.98 TOTAL \$19.80

On input, the data is transmitted from the unit to the FORMAT statement. A subsequent output statement transfers the new data to the output record.

Examples:




Input: H INPUT ALLOWS VARIABLE HEADERS

Result: H INPUT ALLOWS VARIABLE HEADERS

$r^{h_1h_2...h_n}$

This specification also provides for the transfer of any combination of ASCII characters (except the quotation marks.). The number of characters transmitted is the number of positions between the two quotation marks; field length is not specified. If r, an optional repeat count, is present, the character string within the quotation marks is repeated that number of times. Commas preceding the initial quotation mark and following the closing quotation are optional. As with H, the specification must be contained on one line.

Examples:



Result: THIS ALSO IS AN EXAMPLE



Result: ABCABCABC

On input, the number of characters within the quotation marks is skipped on the input field.

New Record

The slash, /, terminates the current record and signals the beginning of a new record of formatted data. It may occur anywhere in the specifications list and need not be separated from the other list elements by commas. Several records may be skipped by indicating consecutive slashes or by preceding the slash with a repetion factor; r-l records are skipped for r/. On output the slash is used to skip lines, cards, or tape records; on input, it specifies that control passes to the next record or card.

Examples:

																			i	Α,.							~			
													_			_								-4,114	VIII.					
2 *		Ì																						4			4.5			
			WR	IT	E	((6 .	, 1	Ø)	,	Г	1					, .	,					,		ı	-			T
·	١Ø		FO	RN	ıΙΔ	T	(2	22	X	, 6	HE	3 U	D	GΕ	Т	11	/(5 H	WE	Ι	ĞН	Τ,	6	Х,		1			-	
				PR															-	• •				'		1				- †
	-		-		†-					•		†		*	• 1		+ +					·			-	1		-		_ †
				• • •	†-		o r			+-	+ -+-	†										-				+				-
			-		+			-		-		† -										-		•					+	1
· ·			WF	RIT	Ε	((6	. 1	Ø)		+		٠			-								-	ļ -	+	-	1 ;	+
	IØ		FC	RM	ıΔ	Ť	(2	22	X	, 6	HE	3 U	D	ĞΕ	T	, 3	1	δН	WE	Ι	GH	Τ,	, 6	Χ,	ļ ··-			İ		1
 			-	PR	+		_		h	·		+-				-	٠,٠					† - '			† ·		- +	+		- †

Result:

line lBUDGET

line 2

line 3

line 4 WEIGHT


Repeat Specifications

Repetition of the field descriptors (except nH) is accomplished by preceding the descriptor with a repeat count, r. If the input/output list warrants, the conversion is interpreted repetitively up to the specified number of times.


Repetition of a group of field descriptors, including nH is accomplished by enclosing the group in parentheses and preceding the left parenthesis with a group in parentheses and preceding the left parenthesis with a group repeat count.

If no group repeat count is specified, a value of one is assumed. Grouped field descriptors may be nested to a depth of one level.


Examples:



can be written as



can be written as



A nested repetition specification would be:

```
FORMAT (E8.3,5X,5(F6.2,5X,14))
```

The group F6.2, 5X, I4 would be written five times, and the entire group, once.

Unlimited Groups

FORMAT specifications may be repeated without use of the repetition factor. If list elements remain after all specifications in a FORMAT statement are processed, the rightmost group of repeated (enclosed in parentheses) specifications is used. If there is no repeated group, processing resumes with the first specification in the statement. On output, each time the rightmost parenthesis in the statement, or in the unlimited group, is reached, the current record is terminated.

FREE FIELD INPUT

By following certain conventions in the preparation of the input data, a 2116A FORTRAN program may be written without use of FORMAT statements. Special symbols included with the ASCII input data items direct the formatting:

```
space or, Data item delimiters

/ Record terminator

+ - Sign of item

. E + - Floating point number

@ Octal integer

"..." Comments
```

All other ASCII non-numeric characters are treated as spaces (and delimiters). Free field input may be used for numeric data only. Free field input is indicated in the FORTRAN READ statement by using an asterisk rather than a number of a FORMAT statement.

Data Item Delimiters

Any contiguous string of numeric and special formatting characters occurring between two commas, a comma and a space, or two spaces, is a data item whose value corresponds to a list element. A string of consecutive spaces is equivalent to one space. Two consecutive commas indicate that no data item is supplied for the corresponding list element; the current value of the list element is unchanged. An initial comma causes the first list element to be skipped.

Example:



Input data: 1720, 1966 Input data: 1266,,1794,2000

1980 1492

Result: I contains 1720 Result: I contains 1266

J contains 1966

K contains 1980

L contains 1492


J contains 1966

K contains 1794

L contains 2000


Floating Point Input

The symbols used to indicate a floating point data item are the same as those used in representing floating point data for FORMAT statement directed input:



If the decimal point is not present, it is assumed to follow the last digit.

Examples:



Input Data: 3.14, 314E-2, 3140-3, .0314+2, .314E1 All are equivalent to 3.14

Octal Input

An octal input item has the following format:

$$e^{x_1 \cdots x_d}$$

The symbol @ defines an octal integer. The x's are octal digits each in the range of 0 through 7. List elements corresponding to the octal data items must be type integer.

Record Terminator

A slash within a record causes the next record to be read immediately; the remainder of the current record is skipped.

Example:



Input data: 987, 654, 321, 123/DESCENDING (CR) (LF)

Result: II contains 987

JJ contains 654

KK contains 321


LL contains 123

MM contains 456

<u>List Terminator</u>

If a line terminates (with a $\overline{\text{CR}}$ (LF)) and a slash has not been encountered, the input operation terminates even though all list elements may not have been processed. The current values of remaining elements are unchanged.

Examples:



Input Data:

Result: A contains 7.987

B contains 5E2

C contains 4.6859E-3

J, X, Y, Z are unchanged.

Comments

All characters appearing between a pair of quotation marks in the same line are considered to be comments and are ignored.

Examples:

"6.7321" is a comment and ignored

6.7321 is a real number

SECTION VIII INPUT/OUTPUT STATEMENTS

Input/output statements transfer information between memory and an external unit. The logical unit is specified as an integer variable that is defined elsewhere in the program or an integer constant.

Each statement may include a list of names of variables, arrays, and array elements. The named elements are assigned values on input and have their values transferred on output.

Records may be formatted or unformatted. A formatted record consists of a string of ASCII characters. The transfer of such a record requires the specification of a FORMAT statement or free field input data. An unformatted record consists of a string of binary values.

LOGICAL UNIT NUMBERS

FORTRAN input/output statements refer to logical unit numbers (1 to 63) whose meaning varies depending upon the operating system used. Refer to the appropriate manual. The operating system relates the logical unit number to a physical unit through system tables. Logical unit 4 always refers to a punch device, 5 to an input device, and 6 to a list output device.

FORMATTED READ, WRITE

A formatted READ statement is one of the forms:

READ (u, f)k
READ (u, *)k
READ (u, f)

Execution of this statement causes the input of the next ASCII records from unit u. The information is scanned and converted according to the FORMAT specification statement, f, and assigned to the elements of list k. If the input is free field, an asterisk is specified in the READ statement rather than the label of a FORMAT statement. If the list is absent, the FORMAT statement should contain editing specifications only.

A formatted WRITE statement may have one of the following forms:

WRITE (u, f)k
or

WRITE (u, f)

This statement transfers ASCII information from locations given by names in the list k to output unit u. The values are converted and positioned as specified by the FORMAT statement f. If the list is absent, the FORMAT statement should contain editing specifications only.

UNFORMATTED READ, WRITE

An unformatted READ statement has one of the forms:

READ (u)k

or

READ (u)

This statement transfers the next binary input record from the unit u to the elements of list k. The sequence of values required by the list may not exceed the sequence of values from the record. If no list is specified, READ (u) skips the next record.

An unformatted WRITE statement has the form:

WRITE (u)k

Execution of this statement creates the next record on unit u from the sequence of values represented by the list k.

AUXILIARY INPUT/OUTPUT STATEMENTS

There are three types of auxiliary input/output statements:

REWIND

BACKSPACE

ENDFILE

A REWIND statement has the form:

REWIND u

This statement causes the unit u to be positioned at its initial point. If the unit is currently at this position, the statement acts as a CONTINUE.

A BACKSPACE statement is as follows:

BACKSPACE u

BACKSPACE positions the unit u so that what had been the preceding record becomes the next record. If the unit is currently at its initial point, the statement acts as a CONTINUE.

An ENDFILE statement is of the form:

ENDFILE u

Execution of this statement causes the recording of an end-of-file record on the output unit u. If given for an input unit, the statement acts as a CONTINUE.

		_
		_

SECTION IX COMPILER INPUT AND OUTPUT

The FORTRAN Compiler accepts as input, paper tape containing a control statement and a source language program. The output produced by the Compiler may include a punched paper tape containing the object program; a listing of the source language program with diagnostic messages, if any; and a listing of the object program in assembly level language.

CONTROL STATEMENT

The control statement must precede the first statement of the source program; it directs the compiler.

FTN is a free field control statement. Following the comma are one to three parameters, in any order, which define the output to be produced. The control statement must be terminated by an end-of-statement mark, (R) (R

The parameters may be a combination of the following:

- B Binary output: A program is to be punched in relocatable binary format suitable for loading by the Relocating Loader.
- L List output: A listing of the source language program is to be produced as the source program is read in.
- A Assembly listing: A listing of the object program in assembly level language is to be produced in the last pass.
- Symbol table only: A listing of the symbol table only is produced; in MTS, if both T and A are specified, only the last used will be decisive.

SOURCE PROGRAM

The source program follows the control statement. Each statement is followed by the end-of-statement mark, CR LF. Specifications statements must precede executable statements. The last statement in each program submitted for compilation must be an END statement. Up to five source programs may be compiled at one time. The last program must be followed by an END\$ statement, if less than six programs are to be compiled.

The control statement, each of the five programs, and the END\$ terminator may be submitted on a single tape or on separate tapes. If more than five programs are contained on a tape, the compiler processes only the first five. The remaining programs must be compiled separately.

BINARY OUTPUT

The punch output produced by the compiler is a relocatable binary program. It does not include system subroutines introduced by the compiler, or library subroutines referred to in the program.

LIST OUTPUT

If the List Output parameter is specified, the first 72 characters of each line of the source program is printed on the List Output device. The END\$ is the last statement printed. If exactly five programs are compiled, however, the END\$ is omitted from the list.

If the Assembly listing parameter is specified, the program is printed in assembly level language on the List Output device. If the Symbol Table option is specified, the program listing is followed by a Symbol Table for the assembly level program.

The format for the assembly level listing is as follows:

Columns	Content
1-5	Zero-relative location (octal) of the instruction
6-7	Blank
8-13	Object code word in octal
14	Relocation or external symbol indicator
15	Blank
16-18	Mnemonic operation code
19	Blank
20-25	Operand address in octal or external symbol name.
26-27	The indicator ",I" if indirect addressing is used.

The Symbol Table listing has the following format:

Columns	Content
1-5	Symbol, statement label, or numeric symbol assigned by the compiler.
6	Blank
7	Relocation indicator
8	Blank
9-14	The zero-relative value of the symbol

The characters that designate an external symbol or type of relocation for the operand address or a symbol in the Symbol Table are:


Character	Relocation Base
Blank	Absolute
R	Program relocatable
Х	External symbol
С	Common relocatable

NOTE: The operating procedures for the FORTRAN Compiler are contained in the *SOFTWARE OPERATING PROCEDURES*SIO SUBSYSTEMS Module (5951-1390).

		_
		_

APPENDIX A HP CHARACTER SET

ASCII CHARACTER FORMAT

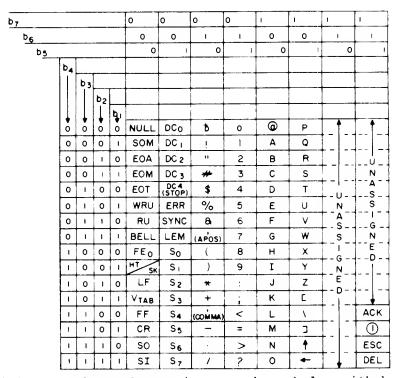

Standard 7-bit set code positional order and notation are shown below with b_7 the high-order and b_1 the low-order, bit position.

Example:

The code for "R" is: $1^{b7} 0^{6} 1^{b5} 0^{b4} 0^{b3} 1^{b2} 0^{b1}$

LEGEND

NULL Null/Idle

SOM Start of message

EOA End of address

EOM End of message

EOT End of transmission

WRU "Who are you?"

RU "Are you...?"

BELL Audible signal

FEo Format effector

HT Horizontal tabulation

SK Skip (punched card)

LF Line feed

 ${
m V}_{
m TAB}$ Vertical tabulation

LEGEND (cont)

FF	Form feed
CR	Carriage return
SO	Shift out
sī	Shift in
DCo	Device control reserved for data link escape
- •	Device Control
DC ₄ (Stop)	Device control (stop)
ERR	Error
SYNC	Synchronous idle
LEM	Logical end of media
so - s ₇	Separator (information)
ъ	Word separator (space, normally non-printing)
<	Less than
>	Greater than
†	Up arrow (Exponentiation)
<	Left arrow (Implies/Replaced by)
\	Reverse slant
ACK	Acknowledge
0	Unassigned control
ESC	Escape
DEL	Delete/Idle

APPENDIX B ASSEMBLY LANGUAGE SUBPROGRAMS

A FORTRAN program can refer to a subprogram that has been prepared using Assembler source language. The subprogram may be treated as a subroutine or as a function. The object code programs generated by FORTRAN and by the Assembler are then linked together by the Relocating Loader when the programs are loaded.

FORTRAN REFERENCE

In the FORTRAN program, a subroutine is called using the following statement:

The symbolic name, s, identifies the subroutine and the a's are the actual arguments.

If the subprogram is a function, it is referenced by using the name and the actual arguments in an arithmetic expression:

$$f(a_1, a_2, ..., a_n)$$

As a result of either the call or the reference, FORTRAN generates the following coding sequence:

JSB s/f Transfers control to subroutine or function

DEF*+n+l Defines return location

DEF a Defines address of a l

DEF a₂ Defines address of a₂

•

DEF a Defines address of a n

The words defining the addresses of the arguements may be direct or indirect depending on the actual arguments. For example, an integer constant as an actual argument would yield a direct reference; an integer variable might yield an indirect reference.

If the subprogram being referenced is a subroutine, it may return none, one, or more than one value through its arguments or through common storage. If the subprogram is a function, it is assumed to return a single value in the accumulators: a function of type integer returns a value in the A-Register; a function of type real returns a value in the A- and B-Registers.

The subprogram may transfer values directly by accessing the words in the calling sequence or it may make use of the FORTRAN library subroutine .ENTR to aid in the transfer.

DIRECT TRANSFER OF VALUES

Any suitable technique may be used to obtain or deliver values for the arguments and to return control to the calling program. If address arithmetic is used in conjunction with an argument (e.g., to process elements of an array), the base location must be a direct reference; the location given in the calling sequence must be checked to determine if it is a direct or indirect reference. If it is an indirect reference the location to which it points must also be checked, and so forth.

Example:

ROGRAMMER				DA'E PROGNAM
Lobe/	Operation	Operand	30	STATEMENT Comments
ПП	NAM	AMSUB	25 23	30 35 40 45
<u> </u>	ENT	AMSUB		
мѕив	NOP		AMSUB TO CO	DNTAIN ADDR OF "*+N+1
1	LDA	AMSUB, I	A CONTAINS	VALUE OF "*+N+1".
	STA	RETRN	RETRN CONT	AINS VALUE OF "*+N+1"
XTAG	ISZ	AMSUB	AMSUB CONTA	AINS ADDR OF LOCATION
	LDA	AMSUB	OF ARGUMENT	T. TEST IF ALL ARGU-
	СРА	RETRN	MENTS PROCE	SSED: COMPARE VALUE
	JMP			WITH ADDR OF CURRENT
			LOCATION OF	ARGUMENT. IF EQUAL
RSAG			RETURN TO	CALLING PROGRAM, IF N
			PROCESS ARC	SUMENT AS REQUIRED.
	LDA	AMSUB, I	A CONTAINS	LOCATION OF ARGUMENT
	LDA	Ø,I		ORD (FIXED POINT)
	1.1		VALUE INTO	Δ.
	1.1			
	LDA	AMSUB, I	LOAD TWO-WO	ORD (FLOATING POINT)
		l		
_	DLD	Ø,I	VALUE INTO	A AND B.
	+			
1	11.1			
++++				
	LDA			WORD VALUE IN ARGUMEN
1	STA	OUTAD	LOCATION.	
1	LDA	WIVAL		
1	STA	OUTAD, I		
1	+ $+$ $+$	 		
 	1			
	1.00	AMEUD T	STORE TWO-	WORD IN ARGUMENT
 	STA		LOCATIONS.	NORD IN ARGUMENT
 	DLD	W2 VAL	LUCATIONS.	
 	DST	OUTAD, I		
 	10311	00140,1		
 	++++	+		
[+++	1		
	LDA	AMSUB, I	A CONTAINS	ADDR OF LOCATION OF
1 1 1	SSA	1,113,05,1	ARGUMENT	TO DETERMINE IF REF I
 	JMP	*+2	INDIRECT	TEST BIT 15. IF ONE,
 	JMP	* + 5	SET TO ZERO	O WITH AND, THEN LOAD
 	AND			ERENCED LOCATION.
	LDA	Ø, I		T WITH NEXT REF. WHEN
 		*_5	DIRECT REF	ENCOUNTERED, PROCEED
		T_0		
NMSK	JMP OCT	Ø77777	WITH PROCES	5 5 I NG .
NMSK	JMP		WITH PROCES	551NG.
NMSK	JMP		WITH PROCE	SSING.
NMSK	JMP OCT		WITH PROCE	SSING.
NMSK	JMP OCT	Ø77777		
	JMP OCT JMP		RETURN THR	OUGH HERE WHEN NEXT
RETRN	JMP OCT JMP BSS	Ø 7 7 7 7 7 NX T A G	RETURN THR	DUGH HERE WHEN NEXT
NMSK RETRN DUTAD	JMP OCT JMP BSS BSS	Ø77777 NXTAG	RETURN THR	DUGH HERE WHEN NEXT
ETRN UTAD	JMP OCT JMP BSS	Ø77777 NXTAG 1	RETURN THR	DUGH HERE WHEN NEXT
ETRN UTAD	JMP OCT JMP BSS BSS BSS	Ø 7 7 7 7 7 NX T A G	RETURN THR	DUGH HERE WHEN NEXT

The preceding example assumes that each argument is processed or partially processed before the next is obtained or delivered. Control returns to the calling program when all arguments have been picked up or delivered.

TRANSFER VIA .ENTR

The transfer of values to or from the locations listed in the calling sequence may be facilitated through use of the FORTRAN library subroutine .ENTR . This subroutine moves the addresses of the arguments into an area reserved within the Assembly language subroutine. The addresses stored in the reserved area are all direct references; .ENTR performs all the necessary direct/indirect testing, etc. It also sets the correct return address in the entry point location.

The general form of the subroutine is:

NAM s The subroutine name is s.

ENT s

EXT .ENTR .ENTR must be declared as external.

a BSS n Reserves n words of storage for the

s NOP addresses of the arguments; this pseudo

instruction must directly precede the entry

point location, s.

JSB .ENTR

DEF a Defines first location of area used to


(First instruction) store argument addresses.

.

JMP s, I

END

Example:

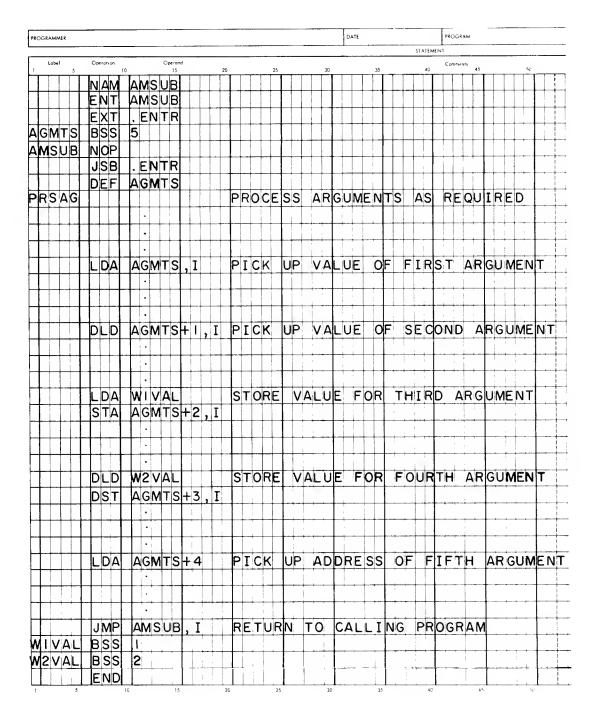

		mages of 1
		_

APPENDIX C SAMPLE PROGRAM

Using Simpson's rule, calculate the value of the integral:

$$\int \frac{\cos x}{x} dx$$


for the following possible values:


Variable	Range of Values
a	-6.99 to +6.99
b	-6.99 to +6.99
$\Delta \mathbf{x}$	25 to +.25

Simpson's rule for approximating a definite integral is:

b
$$\int f(x) dx = \frac{\Delta x}{3} (f(a) + 4f(a + \Delta x) + 2f(a + 2\Delta x) + 4f(a + 3\Delta x) + \dots + f(b))$$
a

The last term is reached when $(a+k\Delta x)=b$, and when neither a 2 nor a 4 appears in front of the first or last term.

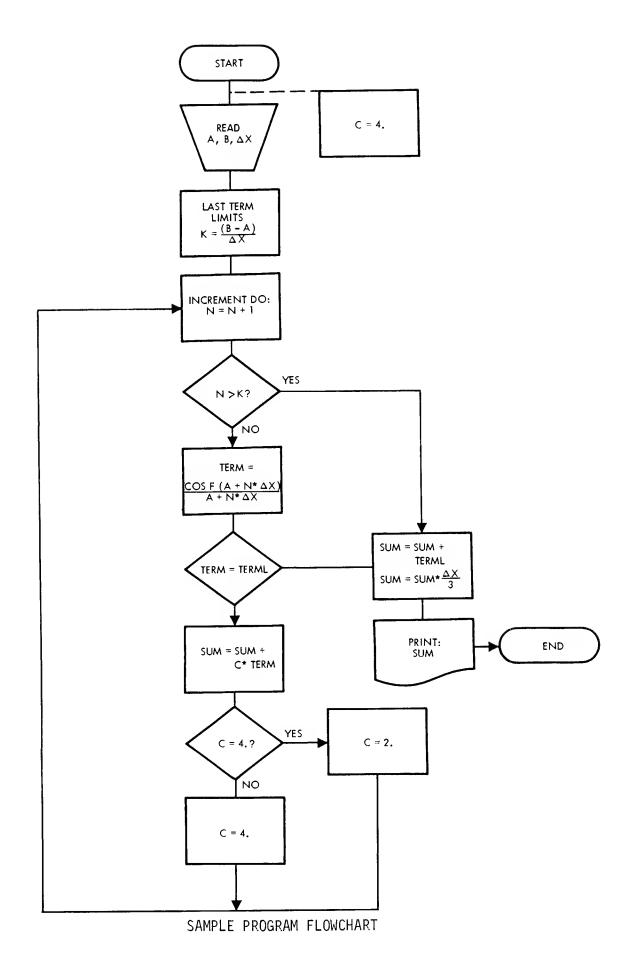

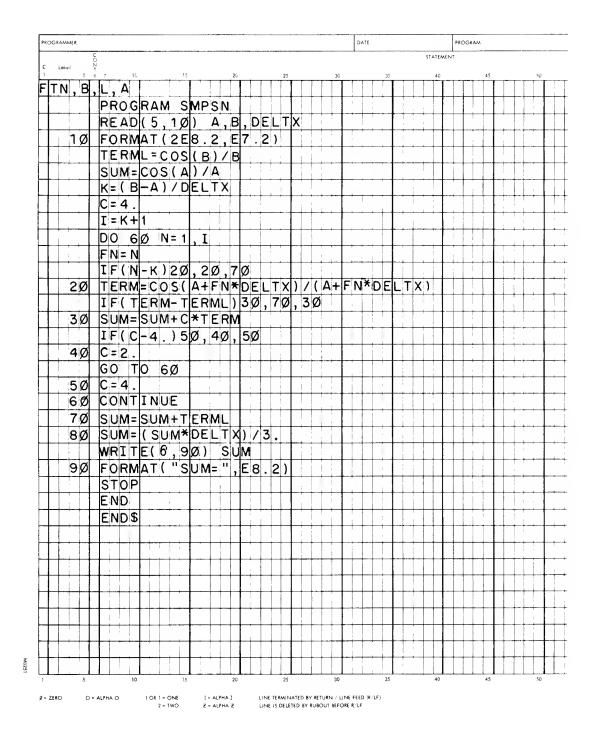

C-3

OBJECT PROGRAM

Input and Output Data

1.23	4.72	•25
SUM= 63E+	00	
STOP		
1.23	2.01	- 10
SUM= 12E-	01	
STOP		
0.34	1.01	•02
SUM= .88E+	00	
STOP		
0.00	1.00	•01
SUM= .57E+	36	
STOP		
1.00	1.25	•05
SUM= .92E-	01	
STOP		

APPENDIX D FORTRAN ERROR MESSAGES

Errors detected in the source program are indicated by a numeric code inserted before or after the statement in the List Output.

The format is as follows:

E-eeee: ssss + nnnn

eeee The error diagnostic code shown below.

ssss The statement label of the statement in which the error was

detected. If unlabeled, 0000 is typed.

nnnn Ordinal number of the erroneous statement following the last

labeled statement. (Comment statements are not included in

this count.)

Error

Code 0001

Description

Statement label error:

- a) The label is in positions other than 1-5.
- b) A character in the label is not numeric.
- c) The label is not in the range 1-9999.
- d) The label is doubly defined.
- e) The label indicated is used in a GO TO, DO, or IF statement or in an I/O operation to name a FORMAT statement, but it does not appear in the label field for any statement in the program (printed after END).

0002 Unrecognized Statement

- a) The statement being processed is not recognized as a valid statement.
- b) A specifications statement follows an executable statement.

Error
Code

Description

c) The specification statements are not in the following order:

> DIMENSION COMMON EQUIVALENCE

d) A statement function precedes a specification statement.

0003

Parenthesis error: There are an unequal number of left and right parentheses in a statement.

0004

Illegal character or format:

- b) A statement does not have the proper format.
- c) A control statement is missing, misspelled, or does not have the proper format.
- d) An indexing parameter of a DO-loop is not an unsigned integer constant or simple integer variable or is specified as zero.

0005

Adjacent operators: An arithmetic expression contains adjacent arithmetic operators.

0006

Illegal subscript: A variable name is used both as a simple variable and a subscripted variable.

0007

Doubly defined variable:

- a) A variable name appears more than once in a COMMON statement.
- b) A variable name appears more than once in a DIMENSION statement.
- c) A variable name appears more than once as a dummy argument in a statement function.

Error Code	<u>Description</u>
	d) A program subroutine, or function name appears as a
	dummy parameter; in a specifications statement of the
	subroutine or function; or as a simple variable in a
	program or subroutine.
0008	Invalid parameter list:
	a) The dummy parameter list for a subroutine or function ex-
	ceeds 63.
	b) Duplicate parameters appear in a statement function.
0009	Invalid arithmetic expression:
	a) Missing operator
	b) Illegal replacement
0010	Mixed mode expression: integer constants or variables appear
	in an arithmetic expression with real constants or variables.
0011	Invalid subscript:
	a) Subscript is not an integer constant, integer variable,
	or legal subscript expression.

- r variable, or legal subscript exp
- b) There are more than two subscripts (i.e., more than two dimensions.)
- c) Two subscripts appear for a variable which has been defined with one dimension only.

Invalid constant: 0012

- a) An integer constant is not in the range of -2^{15} to 2^{15} -1.
- b) A real constant is not in the approximate range of 10^{38} to 10^{-38} .
- c) A constant contains an illegal character.

Error C od e	Description							
								
0013	Invalid EQUIVALENCE statement:							
	a) Two or more of the variables appearing in an EQUIVALENCE							
	statement are also defined in the COMMON block.							
	b) The variables contained in an EQUIVALENCE cause the							
	origin of COMMON to be altered.							
	c) Contradictory equivalence; or equivalence between two or							
	more arrays conflicts with a previously established							
	equivalence.							
0014	Table overflow: Too many variables and statement labels							
	appear in the program.							
0015	Trunchid DO June							
0013	Invalid DO loop:							
	a) The terminal statement of a DO loop does not appear in							
	the program or appears prior to the DO statement.							
	b) The terminal statement of a nested DO loop is not within							
	the range of the outer DO loop.							
	c) DO loops are nested more than 10 deep.							
	d) Last statement in a loop is a GO TO, arithmetic IF,							
	RETURN, STOP, PAUSE, or DO.							

During execution of the object program, diagnostic messages may be printed on the output unit by the input/output system supplied for FORTRAN programs. When a halt occurs, the A-register contains a code which further defines the nature of the error:

Message	A-register	Explanation	Action
*FMT	000001	FORMAT error: a) w or d field does not contain proper digits.	Irrecoverable error; program must be recompiled.
		b) No decimal point after w field.	
		c) w - d \leq 4 for E specification.	
*FMT	000002	 a) FORMAT specifications are nested more than one level deep. 	Irrecoverable error; program must be recompiled.
		b) A FORMAT statement contains more right parentheses than left parentheses.	
*FMT	000003	a) Illegal character in FORMAT statement.	Irrecoverable error; program must be
		b) Format repetition factor of zero.	recompiled.
		c) FORMAT statement defines more character positions than pos- sible for device.	
*FMT	000004	Illegal character in fixed field input item or number not right-justified in field.	Verify data.
*FMT	000005	A number has an illegal form (e.g., two Es, two decimal points, two signs, etc.).	Verify data.

		_
		_
		_

INDEX

A	Constants2-2,2-3,2-7,3-1
	Constants, Integer2-2
ASCII Character FormatA-1	Constants, Octal2-3
Actual Arguments6-1,6-2,6-4,6-7	Constants, Real2-3
Alphabetic Charactersl-l	Continuation Line1-2
Argument Characteristics6-2,6-4,6-5	CONTINUE5-9
Arithmetic Expressions3-1,3-2,6-2	Control Statementsl-3,5-lff.,9-1,9-2
Arithmetic IF5-2	Correspondence of Common Blocks4-3
Arithmetic Operators3-1	D
Array Notation2-7	Data Item Delimiters1-2
Arrays2-5,2-6,2-7,4-1,6-2	Data Quantities2-1
Array Structure2-6	Data Type Properties2-1
Assignment Statement3-5	Data Types2-1
Assembly Language SubprogramsB-1	Declarator, Array4-1
Auxiliary I/O Statements8-3	DIMENSION4-1,4-2,6-2
В	Direct Transfer of ValuesB-2
BACKSPACE8-3,8-4	DO-Implied Lists7-2
Basic External Functions6-11	DO Loops5-4-5-8,7-2,7-3
Binary Output9-2	DO Nests5-6-5-8
С	DO Statement5-3
Calling Program6-1	Dummy Arguments6-1,6-2,6-4,6-7
CALL Statement6-4,6-5	E
Character Setl-1,A-1	Elements of HP FORTRAN2-1
Characters, Alphabeticl-1	END FILE8-3
Characters, Numericl-1	End Line1-3
Characters, Speciall-1	END Statement5-10,6-13,9-2
Coding Form1-3,1-4	END\$ Statement5-10,6-13,9-2
Comments1-3	EQUIVALENCE4-6,4-7
COMMON4-2,4-3,4-7,6-2	Expressions2-7,3-1,ff
Common Block4-2-4-6,4-8	Expressions, Arithmetic3-1
Compiler Input and Output9-1,ff	Expressions, Integer3-4

Expressions, Real3-4	N
Evaluating Expressions3-2,3-3	New and Changed Informationiv
F	Non-Executable Statements4-1
Format Control7-1,ff.,8-1-8-3	Numeric Characters1-1
FORMAT Conversion Specifications7-4,7-5	Octal Constants2-2
FORMAT Editing Specifications7-5,8-2	Order of Evaluation3-2,3-3
FORMAT Statement7-4,7-5	P
Formatted READ/WRITE8-2	PAUSE5-9
Formatted Records8-1	Program Forml-1
Free Field Inputix,8-1	Q
Function Reference6-7,6-11	Quantities, Integer2-1,3-2
Functions6-1,6-5,6-6,6-7	Quantities, Real2-1
6-11,6-12	R
FUNCTION Statement6-5	READ, Formatted8-2
G	READ, Unformatted8-2
GO TO5-1	Real Quantities2-1
H	RETURN Statement6-13
Halt5-9,5-10	REWIND8-3
Halt, Temporary5-9	S
1	Simple Variable2-4
IF Statement5-2,5-3	Source Program9-2
IF Statement, Arithmetic5-2	Source Program Listing
IF Statement, Logical5-3	Spaces1-1
Input Lists	Special Characters1-1
Input/Output Lists7-1,7-3	Specifications Statements4-1,ff,9-2
<pre>Input/Output Statements8-1,ff</pre>	Statement, Assignment3-5
Integer Constants2-2	Statement Function6-9
<pre>Integer Quantities2-1,3-2</pre>	Statement Function Reference6-10
L	Statement Labels1-2,5-1
Labels, Statement1-2,5-1	Statement Type3-5
Lines1-2,1-3	Statements1-2,2-8,4-1,ff,5-1,ff
List Output9-2	STOP5-10
Logical IF5-3	Subprograms6-1,6-3,6-5,6-6,B-1
М	Subroutine Call6-4,6-5,B-1
Main Program6-1,6-2	Subroutines6-3,ff,B-1
Masking Operations3-6	Subscripted Variable2-4,2-5
	,

T	V
Terminators1-2,1-3	Variables2-4,2-5,2-7,3-1,4-6,6-2
Transfer of Values, DirectB-2	Variable, Simple2-4,6-2
Transfer Via .ENTRB-4	Variable, Subscripted2-4,2-5
Types of Data2-1	W
U	WRITE, Formatted8-2
Unconditional GO TO5-1	WRITE, Unformatted8-2,8-3
Unformatted READ/WRITE8-2,8-3	
Unit Assignment8-1	
Unit-Reference8-1	

		×
		-
		-

READER COMMENT SHEET

HP FORTRAN

HP 2116-9015 March 1974

We welcome your evaluation of this manual.	Your	comments	and	suggestions	help	us	improve	our	publications.
Please use additional pages if necessary.									
Is this manual technically accurate?									
Is this manual complete?									
Is this manual easy to read and use?									
Other comments?									
outer connectes.									
FROM:									
Name									
Company									
Address	<u> </u>	************							
						<u> </u>			

BUSINESS REPLY MAIL

No Postage Necessary if Meiled in the United States Postage will be paid by

Manager, Technical Publications Hewlett-Packard Data Systems Development Division 11000 Wolfe Road Cupertino, California 95014 FIRST CLASS PERMIT NO. 141 CUPERTINO CALIFORNIA



FOLD

FOLD



SALES & SERVICE OFFICES

UNITED STATES

ALABAMA 8290 Whitesburg Dr . S E P O Box 4207 Huntaville 35802 Tel (205) 881-4591 TWX 810-726-2204 Medical Dnly 228 W Valley Ave , Room 220 Birmingham 35209 Tel (205) 942-2081

ARIZONA 2336 E Magnolia St Phoenix 85034 Tel (602) 244-1361 2424 East Aragon Rd Tucaon 85706 Tel (602) 294-3148

'ARKANSAS Medical Service Dnly P O Box 5646 Brady Station Little Rock 72205 Tel)501) 664-8773

CALIFORNIA 1430 East Orangethorpe Ave Fullerton 92631 Tel (714) 870-1000

3939 Lankershim Boulevard North Hollywood 91604 Tel (213) 877-1282 TWX 910-499-2170 6305 Arizona Place **Los Angelss** 90045 Tel (213) 649-2511 TWX 910-328-6147

*Los Angelea Tel (213) 776-7500 3003 Scott Boulevard **Sente Clars** 95050 Tel (408) 249-7000 TWX 910-338-0518

*Ridgecrest Tel (714) 446-6165 2220 Watt Ave Secramento 95825 Tel (916) 482-1463 9606 Aero Drive P D Box 23333 San Diego 92123 Tel (714) 279-3200

COLORADO 5600 South Ulster Parkway Englewood 80110 Tel: (303) 771-3455

CONNECTICUT 12 Lunar Drive New Havan 06525 Tel (203) 389-6551 TWX 710-465-2029

FLORIDA PO Box 24210 2806 W Dakland Park Blvd Ft. Lsuderdsis 33307 Tel (305) 731-2020 TWX 510-955-4099

'Jacksonville Medical Service only Tel: (904) 725-6333 P 0 Box 13910 6177 Lake Ellenor Dr **Orlando** 32809 Tel (305) 859-2900 TWX 810-850-0311 P D Box 12826 Psnsacola 32575 Tel (904) 434-3081

GEORGIA P D Box 105005 Atlants 30348 Tel (404) 434-4000 TWX 810-766-4890 Medical Service Only *Augusta 30903 Tel (404) 736-0592

HAWAII 2875 So King Street Honolulu 96814 Tel (808) 955-4455

ILLINOIS

5500 Howard Street **Skokie** 60076 Tel (312) 677-0400 TWX 910-223-3613 *St. Joseph Tei (217) 469-2133

INDIANA 7301 North Shadeland Ave Indlens polis 46250 Tel (317) 842-1000 TWX 810-260-1796

IOWA 1902 Broadway Iows City 52240 Tel (319) 338-9466 Night (319) 338-9467

*KANSAS Derby Tel (316) 267-3655

KENTUCKY
Medical/Calculator Only
Atkinson Square
3901 Atkinson Dr
Suite 207
Louisvills 40218
Tel (502) 456-1573

LOUISIANA P 0 Box 840 3239 Williams Boulevard Kanner 70062 Tel (504) 721-6201 TWX 810-955-5524

MARYLAND 6707 Whitestone Road Baltimore 21207 Tel (301) 944-5400 TWX 710-862-9157 2 Choke Cherry Road Rockvilla 20850 Tel (301) 948-6370 TWX 710-828-9684

MASSACHUSETTS 32 Hartwell Ave Lexington 02173 Tel (617) 861-8960 TWX 710-326-6904

MICHIGAN 23855 Research Drive Fermington Hills 48024 Tel (313) 476-6400 TWX 810-242-2900

MINNESOTA 2400 N Prior Ave Roseviile 55113 Tel (612) 636-0700 TWX 910-563-3734

MISSISSIPPI *Jackson Medical Service only Tel (601) 982-9363

MISSOURI 11131 Colorado Ave Kenese City 64137 Tel (816) 763-8000 TWX 910-771-2087 148 Weldon Parkway Maryland Heights 63043 Tel (314) 567-1455 TWX 910-764-0830

NEBRASKA Medrcal Drily 7171 Mercy Road Suite II0 Omahs 68106 Tel (402) 392-0948

NEW JERSEY W 120 Century Rd Parsmus 07652 Tel (201) 265-5000 TWX 710-990-4951

NEW MEXICO P 0 Box 11634 Station E 11300 Lomas Blvd N E Albuquerque 87123 Tel (505) 292-1330 TWX 910-989-1185

156 Wyatt Drive Les Crucse 88001 Tel (505) 526-2485 TWX 910-983-0550

NEW YORK 6 Automation Lane Computer Park Albs ny 12205 Tel (518) 458-1550 TWX 710-441-8270

New York City Manhattan. Bronx Contact Paramus, NJ Office Tel (201) 265-5000 Brooklyn Dueens Richmond Contact Woodbury, NY Office Tel (516) 921-0300

201 South Avenue **Poughkeepsie** 12601 Tel (914) 454-7330 TWX 510-248-0012 39 Saginaw Drive Rochester 14623 Tel (716) 473-9500 TWX 510-253 5981

5858 East Molloy Road **Syrscuse** 13211 Tel (315) 455-2486 TWX 710-541-0482

1 Crossways Park West Woodbury 11797 Tel (516) 921-0300 TWX 710-990-4951

NORTH CAROLINA P D Box 5188 1923 North Main Street High Point 27262 Tel (919) 885-8101 TWX 510-926-1516

OHIO 16500 Sprague Road Cleveland 44130 Tel (216) 243-7300 TWX 810-423-9431

330 Progress Rd **Dsyton** 45449 Tel (513) 859-8202 TWX 810-474-2818 1041 Kingsmill Parkway Columbua 43229 Tel (614) 436-1041

OKLAHOMA P 0 Box 32008 Okishoma City 73132 Tel (405) 721-0200 TWX 910-830-6862

OREGON 17890 SW Lower Boones Ferry Road Tualstin 97062 Tel (503) 620-3350

PENNSYLVANIA 111 Zeta Drive Pittsburgh 15238 Tel (412) 782-0400 Night 782-0401 TWX 710-795-3124

1021 8th Avenue
King of Prussia Industrial Park
King of Prussia 19406
Tel (215) 265-7000
TWX 510-660-2670

SOUTH CAROLINA 6941-0 N Trenholm Ri **Columbia** 29260 Tel (803) 782-6493

TENNESSEE Memphis Medical Service only Tel (901) 274-7472

*Neshvilla Medical Service only Tel (615) 244-5448

TEXAS
P O Box 1270
201 E Arapaho Rd
Richsrdson 75080
Tel (214) 231-6101
TWX 910-867-4723

P D 80x 27409 6300 Westpark Drive Suite 100 Houston 77027 Tel (713) 781-6000 TWX 910-881-2645 205 Billy Mitchell Road Sen Antonio 78226 Tel (512) 434 8241 TWX 910 871 1170

UTAH 2160 South 3270 West Street Salt Lake City 84119 Tel: (801) 487-0715

VIRGINIA Medical Drily
P D Rox 12778
No 7 Koger Exer Center
Suite 212
Norfolk 23502
Tel (804) 497-1026 7 P D 80x 9854 2914 Hungary Springs Road **Richmond** 23228 Tel (804) 285-3431 TWX 710-956-0157

WASHINGTON Bellefield Office Pk 1203-114th Ave S E Bellsvue 98004 Tel (206) 454-3971 TWX 910-443-2446

*WEST VIRGINIA Medical Analytical Dnly Charlecton Tel (304) 345 1640

WISCONSIN 9004 West Lincoln Ave West Allia 53227 Tel (414) 541-0550

FOR U.S. AREAS NOT LISTED: FOR U.S. AREAS NOT LI Contact the regional office nearest you. Atlanta. Georgia North Hollywood. California. Rockville. Maryland. Skokie Illinois Their complete addresses are listed above.

Service Only

CANADA

ALBERTA Hewlett-Packard (Canada) Ltd 11748 Kingsway Ave Edmonton TSG 0X5 Tel (403) 452-3670 TWX 610-831-2431 EDTH Hewlett-Packard (Canada) Ltd 915-42 Avenue S E Suite 102 Ceigary T2G 121 Tel (403) 287-1672 TWX 6I0-82I-6I4I

BRITISH COLUMBIA Hewlett-Packard (Canada) Ltd 837 E Cordova Street Vancouver V6A 3R2 Tel (604) 254-0531 TWX 610-922-5059 VCR

MANITOBA

MANITOBA Hewlett-Packard (Canada) Ltd 513 Century St St James Winnipeg R3H DL8 Tel (204) 786-7581 TWX 610-671-3531

NOVA SCOTIA Hewlett-Packard (Canada) Ltd 800 Windmili Road P D Box 931 Dertmouth B27 3Z6 Tel (902) 459-7820 TWX 6I0-27I-4482 HFX

ONTARIO
Hewlett-Packard (Canada) Ltd
1785 Woodward Dr
Ottsws K2C OP9
Tel (613) 225-6530
TWX 610-562-8968 Hewlett-Packard (Canada) Ltd 6877 Goreway Drive Miasles suge L4V 1L9 Tei (416) 678-9430 TWX 610-492-4246 OUEBEC
Hewlett-Packard (Canada) Ltd
275 Hymus Blvd
Pointe Cleire H9R 1G7
Tel (514) 697-4232
TWX 610-422-3022
TLX 05-821521 HPCL

Hewiett-Packard (Canada) Ltd 2376 Galvani Street Ste-Foy G1N 4G4 Fel (418) 688 8710 TWX 610-571-5525

FOR CANADIAN AREAS NOT LISTED: Contact Hewlett-Packard (Canada) Ltd in Mississauga

CENTRAL AND SOUTH AMERICA

ARGENTINA Hewlett-Packard Argentina S.A.C. e.l Lavalle 1171-3° Piso Busnos Aires
Tel 35-0436, 35-0627, 35-0341
Telex Public Booth No 9
Cable HEWPACK ARG

BOLIVIA Stambuk & Mark (Bolivia) Ltda Av Mariscal, Santa Cruz 1342 La Paz Tel 40626, 53163, 52421 Telex 3560014 Cable BUKMAR

BRAZIL Hewlett-Packard Do Brasil Hewlett-Packard Do Brasil I E C Ltda Rua Fre Caneca, 1140/52 Bela Vista 01307-**São Paulo**-SP Tel 288-71-11, 287-81-20, 287-61-93 Telex 39I-II2-3602 HPBR-BR Cable HEWPACK São Paulo

Hewlett-Packard Do Brasil I E C Ltda Praca Dom Feliciano, 78-8° andar (Sala 806/8) 90000-Pórto Alegre-RS Tel 25-84-70-DDD (0512) Cable HEWPACK Pórto Alegre Hewlett-Packard Do Brasil

l E.C. Ltda Rua Siqueira Campos, 53, 4º Rua Siqueira Campos, 53, 4° andar-Copacabana 20000-Rio de Jansiro-GB Tel 257-80-94-DDD (021) Telex 39I-212-I905 HEWP-BR Cable HEWPACK Rio de Janeiro

CHILE
Calcagn y Metcalfe Ltda
Alameda 580-01 807
Casilla 2118
Santlego, 1
Tel 398613
Telex 350001 CALMET
Cable CALMET Santago

Medical Only General Machinery Co., Ltda Paraguay 494 Casilla 13910 Sentiego
Tel 31123 31124
Cable GEMCD Santiago

COLOMBIA Instrumentación Instrumentación
Henriik A Langebaek & Kier S A
Carrera 7 No 48-75
Apartado Aéreo 6287
Bogota, I D E
Tel 69-88-77
Cable AARIS Bogota
Telex 044-400

COSTA RICA Cientifica Costarricense S A Calle Central, Avenidas 1 y 3 Apartado 10159 Sen José Tel 21-86-13 Cable GALGUR San José

ECUADOR Medical Only A F. Viscaino Compañía Ltda Av. Rio Amazonas No. 239 P.O. 80x 2925 Oulto Tel. 527-088,527-804 Cable ASTOR Duito

Calculators Only Computadoras y Equipos Computational y Equipos Electrónicos P O Box 2695 Avda 12 De Octubre No 2207 Outto Tel 233869 236783 Telex 02-2113 Sagita Ed Cable Sagitra-Outto

EL SALVADOR IPESA Bulevar de los Heroes II-48 San Salvador Tel 252787

GUATEMALA Avenida La Reforma 3-48 Zona 9 Gusternels City Tel 63627, 64786 Telex 4192 Teletro Gu

MEXICO
Hewlett-Packard Mexicana
S A de C V
Torres Adalid No 21 11 Piso
Col del Valle
Mexico 12 D F
Tel (905) 543-42-32
Telex 017 74-507 Telex 017 /4-507 Hewiett-Packard Mexicana S A de C V Ave Constitución No 2184 Monterrey, N L Tel 48-71-32 48-71-84 Telex 038-843

NICARAGUA Roberto Terán G Apartado Postal 689 Edificio Terán **Menegus** Tel 25114 23412 23454 Cable ROTERAN Managua

PANAMA Electrónico Balboa S A P D Box 4929 Calle Samuel Lewis Culdad de Peneme Tel 64-2700 Telex 3431103 Curunda. Canal Zone Cable ELECTRON Panama

PARAGUAY Z J Melamed S R L División Aparatos y Equipos Médicos División Aparatos y Equipos Científicos y de Investigación P.D. Box 676 Chile-482 Edificio Victoria Asuncion Tel 4-5069 4-6272 Cable RAMEL

PERU Compañla Electro Medica S A Los Flamencos 145 San Isidro Casilla 1030 Lime 1 Tel 413485 Cable ELMED Lima

PUERTO RICO
Hewlett-Packard Inter-Americas
Puerto Rico Branch Office
Petro Rico Branch Office
Petro Rico Branch Office
Petro Rico Branch Office
Petro Rico Branch Office
Sen Jam 10929
Calle 272, Outp.
Caroling Office (199) 762-7355 7455 7655
Telex 345/514

URUGUAY
Pablo Ferrando S A
Comercia e Industrial
Avenida Italia 2877
Casilla de Correo 370
Montevideo
Tel 40-3102
Cable RADIUM Montevideo

VENEZUELA Hewiett-Packard de Venezuela Apartado 50933 Caracas IOS Aparlado 50933 Caracas e Edificio Segre Tercera Transversal Los Ruices Norte Caracas 107 Tei 35-01-07 35-00-84 35-00 65, 35-00-31 Telex 25146 HEWPACK Cable HEWPACK Caracas

FOR AREAS NOT LISTED, CONTACT: Hewlett Packard
Inter Americas
3200 Hillview Ave
Psio Alto California 94304
Tel (415) 493-1501
TWX 910-373 1260
Cable HEWPACK Paio Alto
Telex 034 8300 034 8493

EUROPE

Hewlett-Packard Ges m b H Handelska 52/3 P D Roy 7 P 0 Box 7 A-1205 Vienna Tel (0222) 35 16 21 to 32 Cable HEWPAK Vienna Telex 75923 hewpak a

BELGIUM Hewlett-Packard Benelux S.A.IN V Avenue de Col-Vert - t Avenue de Col-Vert I (Groenkraaglaan) B-1170 Brusaela Tel (02) 672 22 40 Cable PALDBEN Brussels Telex 23 494 paloben bru

DENMARK
Hewlett-Packard A S
Datave, 52
DK-3460 Birkarod
Tel (02) 81 66 40
Cable HEWPACK AS
Telex 166 40 hpas Hewlett-Packard A.S. Naverse) 1 DK-8600 Silkaborg Tel (06) 82 71 66 Telex 166 40 hpas Cable HEWPACK AS

FINLAND Hewlett-Packard OY Nankahousuntie 5 P D Box 6 SF-00211 **Helsink**i 21 Tel: 6923031 Cable HEWPACKOY Helsinki Telex: 12:1563

FRANCE
Hewlett-Packard France
Duartier de Courtaboeut
Boite Postale No 6
F-91401 Orany
Tel (1) 907 78 25
Cable HEWPACK Drsay
Telex 600048

Telex 600048
Hewlett-Packard France
Le Saguin
Chemin des Mouilles
Boite Postale No 12
F-69130 Ecully
Tel (78) 33 81 25.
Cable HEWPACK Eculy
Telex 310617

telex 310617

Hewlett-Packard France
Agence Régionale
Péricentre de la Cépière
Chemin de la Cépière 20
F-31300 Toulouse-La Mirail
Tel (61) 40 11 12
Telex 510957F

Hewlett-Packard France Agence Régionale Aéroport principal de Marsedle-Marignane F 13721Marignane Tei (91) 89 12 36 Cable HEWPACK MARGN Telex 410774F

relex 410774F
Hewlett-Packard France
Agence Régionale
63 Avenue de Rochesler
F-35000 Rannaa
Tel (99) 36 33 21
Cable HEWPACK 74912
Telex 740912F Telex 740912F
Hewlett-Packard France
Agence Regmale
74 Allée de la Robertsau
F-67000 Strasbourg
Tel 1881 35 23 20 21
Telex 890141
Cable HEWPACK STRBG

Medical-Calculator Only Hewlett Packard France Agence Regionale Agence Regionale Centre Vauban 201 rue Colbert Entrée A2 F 59000 Lille Tei (20) 51 44 14 Teiex 820744

GERMAN FEDERAL REPUBLIC Hewlett-Packard GmbH Vertriebszentrale Frankfurt Postfach 560 140 D-6000 Frankfurt 56 Tel (0611) 50 04-1 Cable HEWPACKSA Frankfurt Telex 04 13249 hpffmd

Hewlett-Packard GmbH Technisches Buero Böblingen Technisches Buero Böblingen Herreitbergerstrasse 130 D 7030 **Boblingen** Wurttemberg Ter (070311 667 1 Cable HEPAK Böblingen Telex 07265739 bbn

Telex 07265739 bon
Hewlett-Packard GmbH
Technisches Buero Dusseldort
Fmanuel-Leutze-Str 1 (Seestern)
D-4000 Dusseldort
Tel (0211) 59711
Telex 58 65 533 hpdd d
Hewlett-Packard GmbH
Technisches Buero Hamburg
Wendensträsse 23
D-2000 Hamburg 1
Tel (040) 24 13 93
Cable HEWPACKSA Hamburg
Telex 21 63 032 hphh d

Hewlett Packard GmbH Technisches Buero Hannover Mellendorfer Strasse 3 D:3000 Hannovar-Klaefeld Tel: 10511, 55 60 46 Telex: 092 3259

Telec '092' 3259
Hewlett Packard SmbH
Technisches Buero Nuremberg
Neumeyer Sir '80
0 8500 Nuremberg
Tel 109111 56 50 85 85
Telec N623 8600
Hewlett Packard GmbH
Technisches Buero Munchen
Unternachinger Strasse 28
ISAR Centel
D-8012 Orthobrunn
Tel (1089) 601 30 61 7

Tel. (089) 601-30-61-7 Telex: 52-49-85 Cable: HEWPACKSA Munchen Telex: 0524985 (Waat Barlin)
Hewlett Packard GmbH
Technisches Buero Berlin
Kerth Strasse 2 4
D-1000 Barlin 30
Tel (030) 24 90 86
Telex 18 3405 hpbln d

GREECE Kostas Karayannis 18 Ermou Sireel GR Athens 126 Tel 3237731 Cable RAKAR Alhens Telex 21.59.62 rkar gr Analytical Only INTECO G Papathanassiou & Co

Marini 17 GR Athena 103 Tel 521 915 Cable INTEKNIKA Telex 21 5329 INTE GR Telex 21 5329 INTE GR Medical Only Technomed Helias Ltd 52 Skoufa Street GR Athema 135 Tel 626 972 663 930 614 959 Cable ETALAK Alhens Telex 21-4693 ETAL GR

Medical Only
Elding Trading Company Inc.
Hatnarhovoli Tryggvatotu
IS-Raykjavik
Tol. 1.89.20 Tel 1 58 20 Cable ELDING Reykjavik

IRAN Hewlett Packard Iran Ltd Mir Emad Avenue 14th Street No 19 IR Tahran Tel 85 10 82 86

IRELANO
Hewlett Packard Ltd
king Street Lane
Winnersh Wokingham
GB-Berkshire RG11 5AR
Tel (0734) 78 47 74
Telex 847178 848179

Telex 847178 848179

ITTALY
Hewlett-Packard Italiana S p A
Casella postale 3645
120124 Milana
Tel 120124 Milana
Tel 120124 Milana
Tel 120124 Milana
Tel 120124 Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 120124
Tel 12

Medical only Hewlett-Packard Italiana S p A

Via d'Aghiardi 7 I 56100 **Piaa** Tel 1050) 2 32 04 Telex 32046 via Mrlano Telex 32046 via Milano Hewielt-Packard S.p. A. Via G. Armellini 10 I. 00143 **Roma**-Eur Tel: 106; 54:69 61 Telex: 61514 Cable HEWPACKIT Roma

Hewlett-Packard Italiana S p A Via San Dumtino 46 I-10121 Turino Tel 53 82 64 54 84 68 Telex 32046 via Milano Telex 32046 via Milano Medical Calculators Only Hewlett-Packard Italiana S. p. A. Via Principe Nicola 43 G.C. 1-95126 Catania Tel 1095: 37 05 05 Hewlett Packard Italiana S. p. A. Via Amerigo Vespucci. 9

Via Amerigo Vespucci I 80142 **Napoli** Tel (81) 33 77 11 Tel: (81): 33-77-11 Hewlett Packard Italiana S.p.A. Via E. Masi: 9.B. I-40137 **Bologna** Tel: (051): 30-78-87 LUXEMBURG Hewlett Packard Benelux S.A. N.V Avenue du Col Vert. 1 Groenkraaglaan) 3 1170 **Bruasels**

NETHERLANDS
NETHERLANDS
NEWHET Packard Benelux N V
Van Heuven Goedhartlaan 121
P O Box 667
NL Amalelveen 1134
Tel (020) 47 20 Cable PAL/08T AT
Cable PAL/08T Amsierdam
Telex 13 216 hepa ni

NDRWAY Hewlett Packard Norge A S Nesveren 13 Box 149 N 1344 Haslum Tel (02) 53 83 60 Telex 16621 hpnas n

PDL AND BIURO INFORMACJI TECHNICZNFJ Hewlett Packard UI Stawn 2 6F 00 950Warsaw Tel 38 67 4 53 hepa pi Telex 81 24 53 hepa pi

Telex 81 24 53 hepa pi PDRTUGAL Telectra Empresa Tecnica de Eguipamentos Electricos S a c1 Rua Rodrigo na Fonseca 103 P 0 Box 2531 P 18 68 60 °2 Cable TELECTRA Lisbon Telex 17588

Mundintei Intercambio Mundial de Comércio S a r . Av A A de Aguiar 138 P O Box 2761 P **Liabon** Tel .19) 53 21 31 7 Cable NTERCAMBIO Lisbon

RUMANIA Hewlett Packard Technical Office BD N. Balcesci 16 Bucharaat Tel. 1580 23 138885 Telex. 10440

SPAIN
Hewiehi Packard Española S A Hewlett Packard Española S Jerez No. 3 F **Madrid** 16 Tel (1) 458-26-00 (10 lines) Telex 23515 hpe

Hewlett Packaid Española S A Milanesado 21 23 **E Barcelona** 17 Tel (3) 203 6200 (5 lines) Telex 52603 hpbe e reiek ozous npbe e Hewlett Packard Espanola: S.A. Av Ramón v Caral: 1.9 (Editicio Sevilla II £ Savilla 5 Tel 64 44 54 58

Tel 64 44 54 58
Hewlett-Packard espanola S A
Edition Albra II " B
E Bilban
Tel 23 83 06 23 82 06
Calculators Only
Hewlett Packard Espanola S A
Gran Wa Fernando El Catolico 67
E Valencias
Tel 326 67 28 326 85 55

Tel 1,06,67,28,326,65,55

SWEDEN

Hewitt Parkard Sverige AB
Enigheisvagen 3

Sid 1,08 Bromma 20

Fel 188, 730,05,50

Cable MASAUEAMENTS
Stockholm
Telex 10721

Hewiett Parkard Sverige AB
Frotalisgatan 30

S-421,32 Wastra Frolunda

Tel (331,49,05,50

Telex 10721 Via Bromma Office

SWITZERLAND
Hewlett Packard (Scriwer) AG
Zorrhet Stass) (Scriwer) AG
Zorrhet Stass) (Scriwer) AG
Zorrhet Stass) (Scriwer) AG
P.O. 800-307
CO. 800-307
CO. 8952 Scriweren Zurich
Tei. (01) 88-18-21
Cable HPAG (Cable HPAG (Scriwer) AG
Teiex. 59333 hoag ch
Hewlett Packard (Scriwer) AG
9. Chemm. Louis-Prictic
Hewlett Packard (Scriwer) AG
9. Chemm. Louis-Prictic
Hewlett Packard (Scriwer) AG
9. Chemm. Louis-Prictic
Hewlett Packard (Scriwer) AG
Cable HEWPACKAG
Cable HEWPACKAG
Cable HEWPACKAG
Telex. 27. 333 hpag ch

TURKEY
Telekom Engineering Bureau
P 0 Box 437
Bevglu
TR-latanbul
Tel 49 40 40
Cable TELEMATION Istanbul

UNITEO KINGDOM Hewlett Packard Lto king Street Lane GB-Winnerah Wokingham Berks RG11 5AR Tel (0734) 78 47 74 Cable Hewpie London Telex 847178 9

Hewlett Packard Ltd Hewlett Packard Ltd The Graftons Stamford New Road GB **Attrincham** Cheshire WA14 IDJ Tel (061) 928 9021 Cable Hewpie Manchester Telex 668068

Hewlett Packard Ltd. Dudley Road GB-Halaaowen Worcs Tel (021) 550 7053 Telex (021) 550 7273

Hewlett Packard Ltd 4th Floor Wedge House 799 London Road GB Thornton Heath CR4 6XL Surrey Tel (01) 684 0103 0105 Telex 946825

Hewlett Packard Ltd South Service Wholesale Centre Wear Industrial Estate Washington Washington GB **Naw Town** County Durham Tel Washington 464001 ext. 57:58

Hewlett Packard Ltd is registered address for V.A.T. purposes

only 70 Emsbury Pavement GB **London** EC2A1SX Registered No 690597

USSR
Hewlett Packard Representative
Office USSR
OKIOVSKY Boulevard 4 17, Suite 12
Moscow 101000
Tel 294 2024
Telex 7825 hewpax SU

YUGOSLAVIA Iskra standard Hewiett-Packard Office Miklosrceva 38 VII 61000 Ljubijana Tel 315-87 9 321 674 Telex 31583 YU HEWPAK

AFRICA, ASIA, AUSTRALIA

AMERICAN SAMOA

AMEHICAN SAMOA
Calculators Only
Oceanic Systems Inc
P 0 Box 777
Pago Pago Bayfront Road
Pago Pago 96799
Tel 633-5513
Cable DCEANIC-Pago Pago

Caole DUEANIL-Pago Pago
ANGOLA
Telectra
Empresa Tecnica de
Equipamentos
Electricos. S A R L
R Bargosa Rodrigues 42-FDT
Cawa Postal 6467
Luanda
Tel 34515-6
Caole TELECTRA Luanda

AUSTRALIA
Hewiett-Packard Australia
Pty Ltd
31-41 Joseph Street
Blackburn Victoria 3130
P 0 Box 36
Ooncaster East Victoria 3109
Tel 89-6351 Telex 31-024 Cable HEWPARD Melbourne

Hewlett-Packard Australia
Pty Lid
31 Bridge Street
Pymble
New South Wales 2073
Tel 449-6566
Telex 21561
Cable HEWPARD Sydney Hewlett-Packard Australia Hewhett-Packard Australia Phy Ltd 153 Greenhill Road Parkside 5063 S A Tel 27-2591 Telex 82536 ADEL Cable HEWPARD ADELAIDE

Hewlett-Packard Australia Hewlett-Packard Australia Pty Ltd 141 Stirling Highway Nedlands WA 6009 Tel 86-5455 Telex 93859 PERTH Cable HEWPARD PERTH

Caole HEWPAHD PEHTH
Hewlett-Packard Australia
Pty Ltd
121 Wollongong Street
Fyahwick A Č T 2609
Tel 95-3733
Telex 62650 Canberra
Cable HEWPARD CANBERRA Cable HEWPARD CANBERRA
Hewlett Packard Australia
Pty Ltd
5th Floor
Teachers Union Building
495-499 Boundary Street
Spring Hill 4000 Ducensland
Tel 29-1544
Telex 42133 BRISBANE

CYPRUS Kypronics 19 Gregorios & Xenopoulos Rd P O Box 1152 CY-Nicosia Tel 45628 29 Cable KYPRONICS PANDEHIS

GUAM
Medical Pockel Calculators Dnly
Guam Medical Suply Inc
Jay Ease Building Room 210
P O Box 8383
Tamuning 96911
Tel 646 4513
Cable FARMFD Guam

HONG KONG Schmidt & Co (Hong Kong) LId P 0 Box 297 Connairghi Centre 39th Floor 39th Floor Connaught Road Central Hong Kong Tel H-255291-5 Telex 74766 SCHMC HX Cable SCHMIDTCO Hong Kong

INOIA
Blue Star Ltd
Kasturi Buildings
Jamshedji Tata Rd
Bombay 400 020
Tel 29 50 21
Telex 2156
Cable BLUEFROST

Blue Star Ltd
Sahas
414 2 Vir Savarkar Marg
Prabhadevi

Bombay 400 025
Tel 45 78 87
Telex 4093
Cable FROSTBLUE

Blue Star LId Band Box House Prabhadevi Bornbay 400 025 Tel 45 73 01 Telex 3751 Cable BLUESTAR

Blue Star Ltd 14 40 Civil Lines Kanpur 208 001 Tel 6 88 82 Telex 292 Cable BLUESTAR

Gable BLUESTAR
Blue Star Ltd
7 Hare Street
P D Box 506
Calcutta 700 001
Tel 23-0131
Telex 7655
Cable BLUESTAR Blue Star Lld Blue Star House 34 Mahatma Gandhr Rd

Naw Oathi 110 024
Tel 62 32 76
Telex 2463
Cable BLUESTAR

Blue Star House 11 114 Magarath Road Bangalore 560 025 Tel 55668 Telex 430 Cable BLUESTAR

Blue Star Ltd Meeakshi Mandiran xxx 1678 Mahatma Gandhi Rd Cochin 682 016 Kerala Tel 32069 32161 32282 Telex 046-514 Cable BLUESTAR

Blue Star Ltd

1 1 117 1 Sarojini Devi Road Secundarabad 500 003 Tel 70126 70127 Cable BLUEFROST Telex 459

Telex 459
Blue Star Lld
23 24 Second Line Beach
Madras 600 001
Tel 23954
Telex 379
Cable BLUESTAR

Blue Star Ltd Nathral Mansions

Tel 7383 Cable BLUESTAR Telex 240

Nathraj Mansrons 2nd Floor Bistupur Jamahedpur 831 001

INDONESIA INDONESIA BERCA Indonesia P T P D Box 496 1st Floor JL Cikini Raya 61 Jakarta Tel 56038 40369 49886 Telex 42895 Cable BERCACON BERCA Indonesia P T 63 JL Raya Gubeng Surabaya Tel 44309

IRAN Hewlett-Packard Iran Ltd Hewlett-Packard Ira Mir Emad Ave 14th Street No 19 IR-**Tahran** Tel 851082 86 Telex 21 25 74

ISRAEL Electronics ISRACL
Electrones & Engineering Div
of Motorola Israel Ltd
16 Kiemenetsis Streel
P O Box 25016

Tal-Aviv
Tel 38973
Telex 33569
Cable BASTEL Tel Aviv

JAPAN
Yokogawa Hewlett Packard Ltd
Onashi Building
159 1 Yoyogi
Shibuya ku Tokyo
Tel 03 370-2281 92
Telex 232-2024*HP
Cable YHPMARKET TOK 23-724 Cable YHPMARKET TOK 23-724 Yokogawa Hewlett Packard Ltd Nrsser Ibaraki Building 2 8 Kasuga 2-chrome Ibaraki-shi Daaka 567 Tel (0726) 73 1641 Telex 5332 385 YHP OSAKA Yokogawa-Hewlett Packard Ltd Nakamo Burlding 24 Kami Sasajima-cho Nakamura ku **Nagoya** 450 Tel (052) 571 51/1 Yokogawa Hewlett-Packard Ltd Tanigawa Building 2-24 t Tsuruya choo

2-24 1 Tsuruya choo Kanagawa-ku Yokohama 221 Tel 045-312-1252 Telex 382-3204 VHP YOK Yokogawa Hewletti-Packard Ltd Mito Mitsu Building 105 1 chrome San no-maru Mito Indiang 310 Tel 0292-25-7470

Yokogawa-Hewlett-Packard LId Inque Building 1348 3 Asahi cho 1-chome Ataugi Kanagawa 243 Ter 0462 24-0452

KENYA Technical Engineering Services F A iLld P O Box 18311 Nairobi Tel 557726 556762 Cable PROTON

Medical Only
International Aeradio(E.A.) Ltd
P.O. Box 19012
Nairobi Airport
Nairobi
Tel: 336055 56
Telex: 22201 22301
Cable: INTAERID Nairobi

KDREA American Trading Company

American Trading Company Korea C P O Box 1103 Dae Kyung Bidg - 8th Floor 107 Sejong Ro Chongro-Ku **Saoul** Tel (4 lines) 73-8924-7 Telex K-28338 Cable AMTRACO Seoul

LEBANON
Constantin E Macridis
Clemenceau Street 34
P. O. Box 7213
R.L. Beerut
Tel 36 53 97 8
Telex 21114 Leb
Cable ELECTRONUCLEAR Beirut

MALAYSIA
Teknik Mutu Sdn Bhd
2 Lorong 13 6A
Section 13
Petaiing Jaya Salang or
Tel 773455(5 lines) MOZAMBIQUE

A N Goncalves LIa 162 1 Apt 14 Av D Luis Caixa Postal 107 Lourenco Marquaa Tel 27091 27114 Telex 6 203 Negon Mo Cable NEGON

NEW ZEALANO

NEW ZEALANO
Hewielf Packard in Zilld
4 12 Cruckshank Street
Kilbunie Wellington 3
Malling Andress Hewlett Packard
in Zilld
9 0 Box 9443
Courtney Place
Wellington
Tel 87 7 199
Telex N. 2889
Cable HEWPACK Wellington
Hewielf Packard in Zilld

Hewlett Packard rN Z + Ltd Pakuranga Professional Centie 267 Pakuranga Highway Box 51092

267 Paturanga Highway
Box 51092
Pakuranga
Ta 568 Paturanga
Ta 568 Paturanga
Ta 568 Paturanga
Table HKWPACK Auckland
Analytica Medical Surpines N Z
Ltd
Scientific Division
79 Cartion Gore Rd Newmarket
P 0 Box 1234
Auckland
Tel 75-289
Telis 7958 MEDISUP
Cable 29471A Auckland
Analytica Medical Only
Medical Surpines N Z
Ltd
P 0 Box 194
Tel 80 1994
Tel 80 799
Tel 80 799
Tel 80 799
Tel 80 799
Tel 80 799
Tel 80 799

Tel 850 ⁷99 Telex 3858 Cable DENTAL **W**ellington Cable DENTAL Wellington Analytical Medical Only Medical Supplies N.Z. Ltd. P.O. Box 309 239 Stannipre Road Christechich Tol. 803 310 Tel 892 019 Cable DENTAL Christohurch Analytical Medical Only Medical Supplies N.Z. Ltd 303 Great King Street P.O. Box 233

Dunedin Tel 88 817 Cable DENTAL Dunedin

NIGERIA
The Electronics
Instrumentations Ltd
N6B 770 Oyo Road
Oluseun House
P.M.B. 5402 P.M.B. 5402 Ibadan Tel 61577 Telex. 31231 TEIL Nigeria Cable. THETEIL Ibadan The Electronics Instrumenta lions : to 144 Agege Motor Road Mushin P.O. Box 6645 Lagoa Cable THETEIL Lagos

PAKISTAN
Mushko & Company Ltd
Oosman Chambers
Adoulah Haroon Road
Karachi 3
Tel 511027 512927
Telex KR984
Cable COUPERATOR Karachi
Mushko & Company Ltd
388 Satellite Town
Rawalipindi
Tel 41924
Cable EFMUS Rawalipindr

PHILIPPINES
The Online Advanced Systems Corporation
6th Floor Yujuico Building
560 Quintin Paredes Street
Binondo Manila
Tel 40-05-41 40-05-31
Telex 3327 GENBANK

RHOOESIA Field Technical Sales 45 Kelvin Road North P.O. Box 3458 P 0 Box 3458 **Salisbury** Tel 705231 (5 lines) Telex RH 4l22

SINGAPDRE
Hewleft Packard Smgapore
IPHE I Ltd
Bik 2 6th Floor Jalan
Bukir Merah
Bukir Merah
Redhift Industrial Estate
Alexandra P 0 Box 58
Singapore 3
Tell 633022
Telex HPSG RS 21486
Cable HEWPACK Singapore

Cable HEWPACK Singapore
SOUTH AFRICA
Hewlerl Packaid South Affica
1Ph 1 Ltd
Private Bug Wendywood
Sandion Transval 2144
Hewlerl Packard House
Daphne Street, Wendywood
Sandion Transval 2144
Tel 802-1040F.
Tel 802-1040F.
Tel 802-1040F.
HEWPACK JOHANNESBURG
Hewieth-Packard South Africa
1Ph 1 Ltd

(Pty.) Ltd P.O. Box 120 Howard Prace Cape Province Howard Prace Cape Province
7450
Pine Park Center Forest Drive
Pinalanda Cape Province 7405
Tel 53-7955 thu 9
Telex 57 0006

Hewlett Packard South Africa Pry 1 Ltd
P 0 Box 37099
Overport Durban 4067
643 Ridge Road Durban
Ourban 4001
Tel 88 7478 88 1080 88 2520
Telex 6 7954
Cable HEWPACK

TAIWAN
Hewlett Packard Far East Ltd
Taiwan Branch
39 Chung Shiao West Road
Sec 1 7th Floor
Taipas
Fel 389160 1 2 3
Felix 21824 HEWPACK
Cable HEWPACK TAIPEL Hewlett Packard Taiwan 38 Po Ar Lane San Min Chu-Kaohalung Tel ₁07) 242318

Tel (10/1/24/2318 Analytical Only San Kwanij Instruments Co Ltd No 20 yung Sur Road Teliper (10) Teli 37/13/17 L Telex 22894 SANKWANG Cable SAHKWANG TAIPEL TANZANIA

Medical Only
International Aeradio (E.A.) Ltd
P.O. Box 361
Dereaalearn
Tel 21251 Ext. 265
Telex. 41030

THAILAND UNIMESA Co Ltd Elcom Research Building Bangjak Sukumvit Ave Bangkok Tel 932367 930338 Cable UN:MESA Bangkok

MGANDA
Medical Only
International AeradrotE A) Ltd
P O Box 2577
Kampala
Tel 54388
Cable INTAERID Kampala

ZAMBIA R J Tilbury (Zambia) Ltd P O Box 2792 Luaeka Tel 73:793 Cable ARJAYTEE Lusaka

MEDITERRANEAN AND
MIDDLE EAST COUNTRIES
NOT SHOWN PLEASE CONTACT:
Hewlett Packard S A
Mediterranean and Middle
East Operations
35 Kolleyston Street

East Operations 35 Kolokotioni Street Plaira kefallaniou GR Kifissia **Athena** Telex 21 6588 Cable HEWPACKSA Athens

DTHER AREAS NOT LISTED, CONTACT: DTHER AREA NOT UST Hewiett Packard Intercontiner 3200 Hillview Ave Pain Alto California 94304 Tei. 4151 493 1501 FWX 910 373 1267 Cuble HEWPACK Palo Alto Felex 034 8300 034 8493

